

# DeltaSol® BX Plus

**RESOL®**

Manual for the  
specialised craftsman

**Mounting**

**Electrical connection**

**Operation**

**Troubleshooting**

**Application examples**



11202383

Thank you for buying this RESOL product.  
Read this manual carefully to get the best performance from this unit.  
Please keep this manual carefully.

en

Manual

[www.resol.com](http://www.resol.com)

## Safety advice

Please pay attention to the following safety advice in order to avoid danger and damage to people and property.

## Instructions

Attention must be paid to the valid local standards, regulations and directives!

## Information about the product

### Proper usage

The solar controller is designed for use in solar thermal systems and heating systems in compliance with the technical data specified in this manual. Improper use excludes all liability claims.

### CE Declaration of conformity

The product complies with the relevant directives and is therefore labelled with the CE mark. The Declaration of Conformity is available upon request, please contact RESOL.



## Target group

These instructions are exclusively addressed to authorised skilled personnel.

Only qualified electricians should carry out electrical works.

Initial installation must be effected by qualified personnel named by the manufacturer.

## Description of symbols

### WARNING!



Warnings are indicated with a warning triangle!

→ **They contain information on how to avoid the danger described.**

Signal words describe the danger that may occur, when it is not avoided.

- **WARNING** means that injury, possibly life-threatening injury, can occur.
- **ATTENTION** means that damage to the appliance can occur.



## Note

Notes are indicated with an information symbol.

- Arrows indicate instruction steps that should be carried out.

## Disposal

- Dispose of the packaging in an environmentally sound manner.
- Dispose of old appliances in an environmentally sound manner: Upon request we will take back your old appliances bought from us and guarantee an environmentally sound disposal of the devices.



## Note

Strong electromagnetic fields can impair the function of the controller.

- Make sure the controller as well as the system are not exposed to strong electromagnetic fields.


**Subject to technical change. Errors excepted.**

## Contents

<b>1 Overview .....</b>	<b>4</b>	<b>9 Arrangement .....</b>	<b>48</b>
1.1 Optional functions .....	5	9.1 Optional functions .....	48
<b>2 Installation .....</b>	<b>5</b>	<b>10 Heating .....</b>	<b>58</b>
2.1 Mounting .....	5	10.1 Demands .....	59
2.2 Electrical connection .....	6	10.2 Heating circuits (with EM Extension Modules only) .....	59
2.3 Data communication / Bus .....	7	10.3 Optional functions .....	63
2.4 SD card slot .....	8	<b>11 HQM .....</b>	<b>66</b>
<b>3 Step-by-step parameterisation .....</b>	<b>8</b>	<b>12 Basic settings .....</b>	<b>68</b>
<b>4 Operation and function .....</b>	<b>9</b>	<b>13 SD card .....</b>	<b>68</b>
4.1 Buttons .....	9	<b>14 Manual mode .....</b>	<b>70</b>
4.2 Selecting menu points and adjusting values .....	9	<b>15 User code .....</b>	<b>71</b>
4.3 Menu structure .....	13	<b>16 In- / Outputs .....</b>	<b>71</b>
<b>5 Initial commissioning .....</b>	<b>14</b>	16.1 Modules .....	71
5.1 Basic systems and hydraulic variants .....	16	16.2 Inputs .....	72
5.2 Overview of relay and sensor allocation .....	17	16.3 Outputs .....	73
<b>6 Main menu .....</b>	<b>27</b>	16.4 PWM profiles .....	74
<b>7 Status .....</b>	<b>27</b>	<b>17 Troubleshooting .....</b>	<b>76</b>
7.1 Solar .....	27	<b>18 Accessories .....</b>	<b>80</b>
7.2 Arrangement .....	27	18.1 Sensors and measuring instruments .....	80
7.3 Heating .....	27	18.2 VBus® accessories .....	80
7.4 Messages .....	28	18.3 Interface adapters .....	82
7.5 Meas. / Balance values .....	29	<b>19 Index .....</b>	<b>83</b>
7.6 Service .....	29		
<b>8 Solar .....</b>	<b>29</b>		
8.1 Basic solar settings .....	29		
8.2 Solar optional functions .....	33		
8.3 Function control .....	46		
8.4 Solar expert menu .....	47		

## 1 Overview

- Extra large graphic display
- 5 relay outputs
- 8 (9) temperature sensors (system-dependent)
- 2 inputs for digital Grundfos Direct Sensors™
- 2 PWM outputs for speed control of high-efficiency pumps
- Datalogging / firmware updates via SD memory card
- Pre-programmed optional functions
- Drainback option
- Time-controlled thermostat function
- Thermal disinfection
- Automatic function control according to VDI 2169
- RESOL VBus®
- Energy-efficient switch-mode power supply

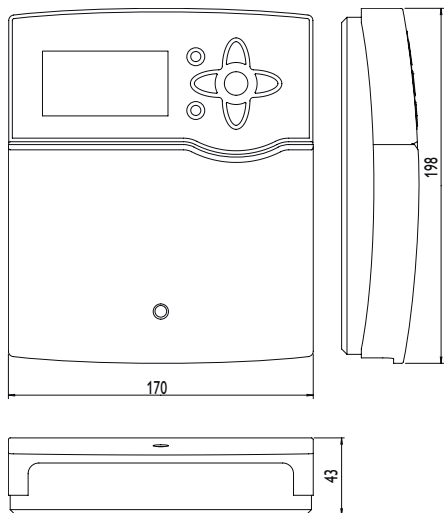

### Note

The SD card is not included with the controller. For more information about accessories, see page 80.

### Technical data

**Inputs:** 8 (9) inputs for Pt1000, Pt500 or KTY temperature sensors, 1 impulse input V40, inputs for 2 digital Grundfos Direct Sensors™, 1 input for a CS10 irradiation sensor

**Outputs:** 4 semiconductor relays, 1 potential-free relay, 2 PWM outputs

#### Switching capacity:

1 (1) A 240 V~ (semiconductor relay)

4 (1) A 24 V/240 V~ (potential-free relay)

**Total switching capacity:** 4 A 240 V~

**Power supply:** 100... 240 V~, 50... 60 Hz

**Supply connection:** type Y attachment

**Power consumption:** < 1W (standby)

**Mode of operation:** type 1.B.C.Y action

**Rated impulse voltage:** 2.5 kV

**Data interfaces:** RESOL VBus®, SD card slot

**VBus® current supply:** 60 mA

**Functions:** System controller for solar and heating systems. Functions such as:  $\Delta T$  control, pump speed control, heat quantity measurement, operating hours counter for the solar pump, tube collector function, thermostat function, store loading in layers, priority logic, drainback option, booster function, heat dump function, thermal disinfection function, PWM pump control, automatic function control according to VDI 2169.

**Housing:** plastic, PC-ABS and PMMA

**Mounting:** wall mounting, also suitable for mounting into patch panels

**Indication/Display:** Full graphic display, control lamp (directional pad) and background illumination

**Operation:** 7 push buttons at the front

**Ingress protection:** IP 20/EN 60529

**Protection class:** I

**Ambient temperature:** 0... 40 °C

**Pollution Degree:** 2

**Dimensions:** 198 × 170 × 43 mm

## 1.1 Optional functions

### Solar

Bypass  
CS Bypass  
External heat exchanger  
Tube collector  
Target temperature  
Antifreeze  
Afterheating suppression  
Parallel relay  
Cooling mode  
Drainback  
Twin pump  
Heat dump  
Flow rate monitoring  
Pressure monitoring

### Arrangement

Parallel relay  
Mixer  
Boiler loading  
Error relay  
Heat exchange  
Solid fuel boiler  
Circulation  
Return preheating  
Function block  
Irradiation switch

### Heating

Thermal Disinfection  
DHW heating

## 2 Installation

### 2.1 Mounting

The unit must only be located in dry interior rooms. The controller must additionally be supplied from a double pole switch with contact gap of at least 3 mm [0.12"].

Please pay attention to separate routing of sensor cables and mains cables.

In order to mount the device to the wall, carry out the following steps:


- ➔ Unscrew the cross-head screw from the cover and remove it along with the cover from the housing
- ➔ Mark the upper fastening point on the wall. Drill and fasten the enclosed wall plug and screw leaving the head protruding
- ➔ Hang the housing from the upper fastening point and mark the lower fastening points (centres 150 mm [5.9"])
- ➔ Insert lower wall plugs
- ➔ Fasten the housing to the wall with the lower fastening screws and tighten
- ➔ Carry out the electrical wiring in accordance with the terminal allocation, see page 6
- ➔ Put the cover on the housing
- ➔ Attach with the fastening screw



#### Note

Strong electromagnetic fields can impair the function of the controller.

Make sure the controller as well as the system are not exposed to strong electromagnetic fields.

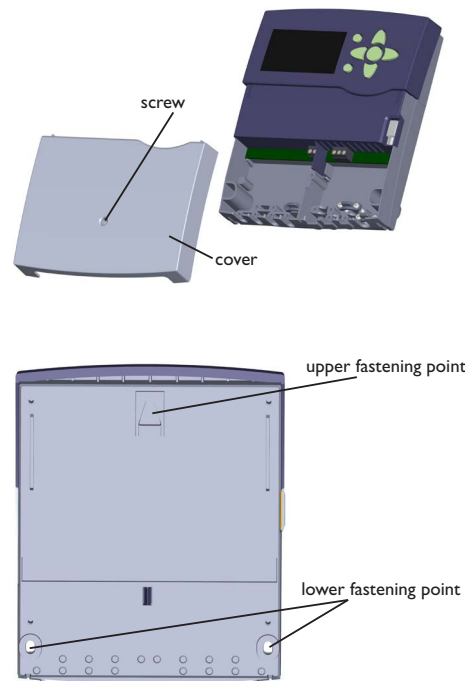

#### WARNING!



#### Electric shock!

Upon opening the housing, live parts are exposed.

➔ **Always disconnect the controller from power supply before opening the housing!**

## 2.2 Electrical connection



### Note

Connecting the device to the power supply must always be the last step of the installation!

The controller is equipped with 5 **relays** in total to which loads such as pumps, valves, etc. can be connected:

Relays 1 ... 4 are semiconductor relays, designed for pump speed control:


Conductor R1 ... R4

Neutral conductor N (common terminal block)

Protective earth conductor (⊕) (common terminal block)

Relay 5 is a potential-free relay:

Connections to the R5 terminals can be made with either polarity.



### WARNING! ESD damage!



Electrostatic discharge can lead to damage to electronic components!

→ **Take care to discharge properly before touching the inside of the device! To do so, touch a grounded surface such as a radiator or tap!**



### Note:

The pump speed must be set to 100 % when auxiliary relays or valves are connected.

### WARNING!



### Electric shock!

Upon opening the housing, live parts are exposed.

→ **Always disconnect the controller from power supply before opening the housing!**





### Note

For more details about the initial commissioning procedure, see page 14.


Depending on the product version, mains cables and sensor cables are already connected to the device. If that is not the case, please proceed as follows:

**Temperature sensors** have to be connected to the terminals S1 ... S9 and GND (either polarity).

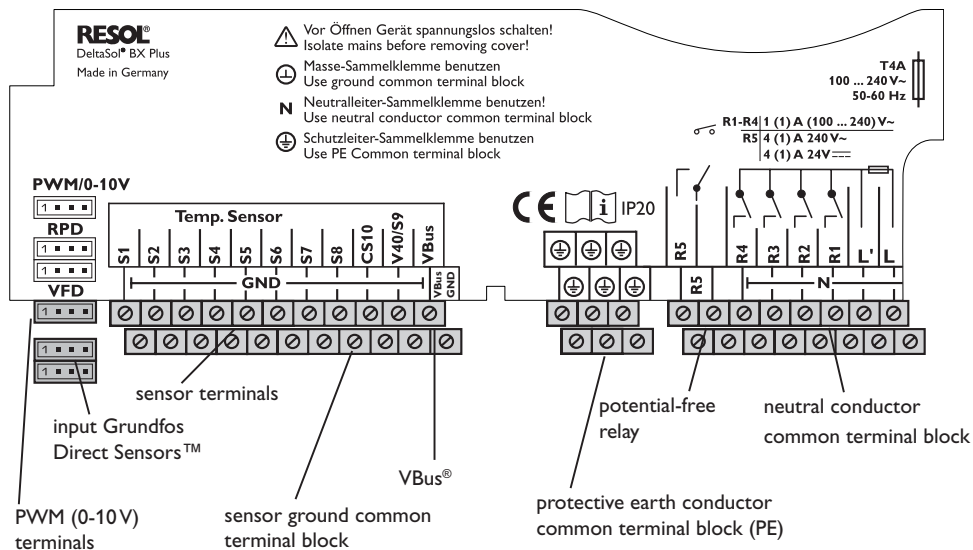



The terminal S9 can be used as an impulse input for a V40 flowmeter or as an input for an FS08 flowswitch. The **V40** flowmeter can be connected to the terminal S9/V40 and GND (either polarity).

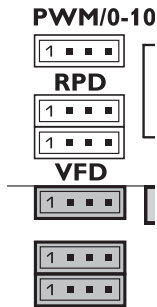

Connect the irradiation sensor **CS10** to the terminals CS10 and GND with correct polarity. To do so, connect the cable marked GND to the GND common terminal block, the cable marked CS to the terminal marked CS10.

The socket marked **PWM** contains the two PWM/0-10 V signal outputs for high-efficiency pumps.

Contact pin allocation is as follows:

#### PWM/0-10



1 2 3 4

- 1 = 1st PWM output, control signal
- 2 = 1st PWM output, GND
- 3 = 2nd PWM output, GND
- 4 = 2nd PWM output, control signal



#### Note:

If a relay is to be allocated to a PWM / 0-10V output, carry out the following adjustment in the In-/Outputs menu:

1st output PWM / 0-10V: selection output = 7

2nd output PWM / 0-10V: selection output = 8


Connect the **digital Grundfos Direct Sensors™** to the GDSD1 and GDSD2 inputs.



#### Note:

If Grundfos Direct Sensors™ are used, connect the sensor ground common terminal block with PE.

The controller is supplied with power via a mains cable. The power supply of the device must be 100...240V~ (50 ... 60Hz).

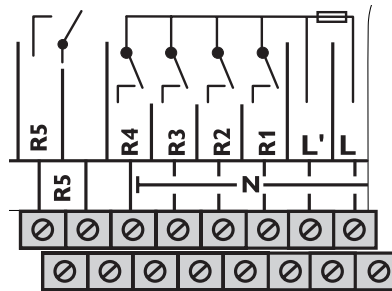

The **mains connection** is at the terminals:

Neutral conductor N

Conductor L

Conductor L' (L' is not connected with the mains cable.

L' is a fused contact permanently carrying voltage)

Protective earth conductor  $\perp$  (common terminal block)

## 2.3 Data communication / Bus

The controller is equipped with the **RESOL VBus®** for data transfer with and energy supply to external modules. The connection is carried out at the terminals marked **VBus** and **VBus / GND** (any polarity). One or more **RESOL VBus®** modules can be connected via this data bus, such as:

- RESOL GA3 Large Display module / Smart Display SD3
- RESOL AM1 Alarm module
- RESOL DL2 Datalogger
- RESOL EM Extension module

Furthermore, the controller can be connected to a PC via the RESOL VBus®/USB or VBus®/LAN interface adapter (not included with the **DeltaSol® BX Plus**). With the **RESOL ServiceCenter Software (RSC)**, measured values can be read, processed and visualised. The software allows easier parametrisation and function control of the system.

Parameterising the controller via the RESOL ServiceCenter Software is not yet possible. The feature will be made available in an upcoming version of the RESOL configuration tool RPT.



#### Note:

For more information about accessories, see page 80.

#### WARNING!



#### Electric shock!

L' is a fused contact permanently carrying voltage

→ **Always disconnect the controller from power supply before opening the housing!**

## 2.4 SD card slot

The controller is equipped with an SD card slot.

With an SD card, the following functions can be carried out:

- Store measurement and balance values onto the SD card. After the transfer to a computer, the values can be opened and visualised, e.g. in a spreadsheet programme.
- Prepare adjustments and parameterisations on a computer and transfer them via the SD card.
- Store adjustments and parameterisations on the SD card and, if necessary, retrieve them from there.
- Download firmware updates from the Internet and install them on the controller.

A standard SD card is not included with the DeltaSol® BX Plus, but can also be purchased at RESOL.

For more information about using an SD card, see page 68.



## 3 Step-by-step parameterisation

The DeltaSol® BX Plus is a controller that offers a broad variety of functions to the user. At the same time, the user has a lot of freedom in configuring them. Therefore, to set up a complex system, careful planning is required. We recommend drawing a sketch of the system first.

If planning, hydraulic execution and electrical connection have all been carried out successfully, proceed as follows:

### 1. Running the commissioning menu

The commissioning menu is run after the first connection and after every reset. It will request the following basic adjustments:

- Menu language
- Temperature unit
- Volume unit
- Pressure unit
- Energy unit
- Time
- Date
- Solar system
- Hydraulic variant

At the end of the commissioning menu, a safety enquiry follows. If the safety enquiry is confirmed, the adjustments are saved.

For further information about the commissioning menu see page 14.

### 2. Registering sensors

If flowmeters, flow switches, Grundfos Direct Sensors™ and/or external extension modules are connected, these have to be registered in the In-/Outputs menu.

For further information about the registration of modules and sensors see page 71.

### 3. Activating solar optional functions

The basic solar system has been adjusted during commissioning. Now, optional functions can be selected, activated and adjusted.

Free relays can be allocated to optional functions which require a relay. The controller always suggests the numerically smallest free relay.

Sensors can be allocated to more than one function. For further information about the solar optional functions see page 33.

### 4. Activating optional arrangement functions

Now, optional functions for the non-solar part of the arrangement can be selected, activated and adjusted.

Free relays can be allocated to optional functions which require a relay. The controller always suggests the numerically smallest free relay.

Sensors can be allocated any number of times without impairing any other functions.

For further information about the optional arrangement functions see page 48.

### 5. Adjusting heating circuits and activating optional heating functions

Now, heating circuits can be activated and adjusted. Internal heating circuits are only offered as long as at least 3 relays are free.

For the heating part of the arrangement, optional functions can be selected, activated and adjusted.

To heating circuits and optional functions which require one or more relays, the corresponding number of free relays can be allocated. The controller always suggests the numerically smallest free relay.

Sensors can be allocated any number of times without impairing any other functions.








For further information about heating circuits and optional heating functions see page 58.




## 4 Operation and function

### 4.1 Buttons

The controller is energised via the 7 buttons next to the display. They have the following functions:



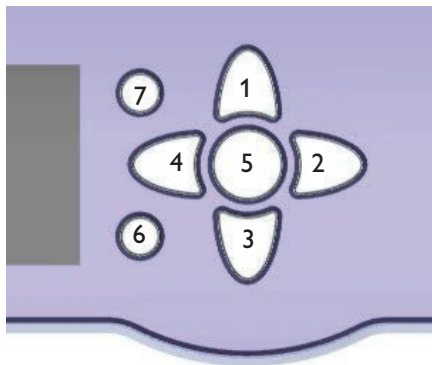




- Button  - scrolling upwards
- Button  - scrolling downwards
- Button  - increasing adjustment values
- Button  - reducing adjustment values
- Button  - confirming
- Button  - entering the status menu / chimney sweeper mode (system-dependent)
- Button  - escape button for changing into the previous menu





### 4.2 Selecting menu points and adjusting values


During normal operation of the controller, the display is in the main menu. If no button is pressed for a few seconds, the display illumination goes out.





Press any key to reactivate the display illumination.


- In order to scroll through a menu or to adjust a value, press either buttons  and  or buttons  and 
  - To open a submenu or to confirm a value, press button 
  - To enter the status menu, press button  – unconfirmed adjustments will not be saved
  - To switch one menu level upwards press button  – unconfirmed adjustments will not be saved
- If no button has been pressed within a couple of minutes, the adjustment is cancelled and the previous value is retained.

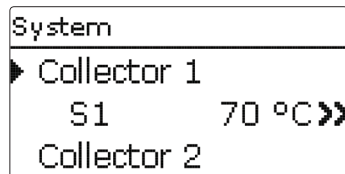

If the symbol **>>** is shown behind a menu item, pressing button  will open a new submenu.

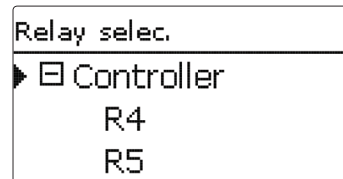


If the symbol  is shown in front of a menu item, pressing button  will open a new submenu. If it is already opened, a  is shown instead of the .

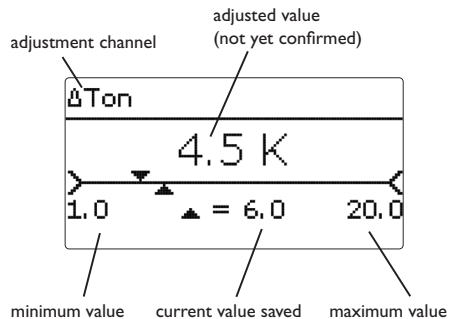

Values and adjustments can be changed in different ways:

Numeric values can be adjusted by means of a slide bar. The minimum value is indicated to the left, the maximum value to the right. The large number above the slide bar indicates the current adjustment. By pressing buttons **2** or **4** the upper slide bar can be moved to the left or to the right.

Only after the adjustment has been confirmed by pressing button **5** will the number below the slide bar indicate the new value. The new value will be saved if it is confirmed by pressing button **5** again.

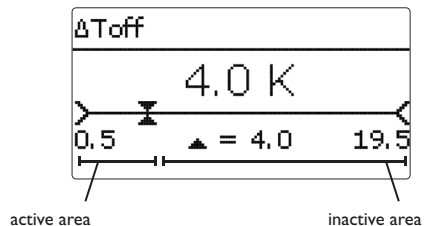

When two values are locked against each other, they will display a reduced adjustment range depending on the adjustment of the respective other value.

In this case, the active area of the slide bar is shortened, the inactive area is indicated as a dotted line. The indication of the minimum and maximum values will adapt to the reduction.

Variant	
<input type="radio"/>	Valve
<input checked="" type="radio"/>	Pump

If only one item of several can be selected, they will be indicated with "radio buttons". When one item has been selected, the radio button in front of it is filled.


Collector	
<input type="checkbox"/>	Save
<input checked="" type="checkbox"/>	Collector 1
<input checked="" type="checkbox"/>	Collector 2

If more than one item of several can be selected, they will be indicated with checkboxes. When an item has been selected, an **x** appears inside the checkbox.

## Adjusting the timer


When the **Timer** option is activated, a timer is indicated in which time frames for the function can be adjusted.

First of all, an overview of the current adjustments is displayed. For each day of the week there is an overview display. The display can be switched back and forth between the different days by pressing buttons **2** or **4**.

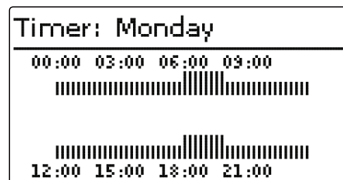


In order to adjust the timer, press button **5**.

First the individual days of the week or all days of the week can be selected.

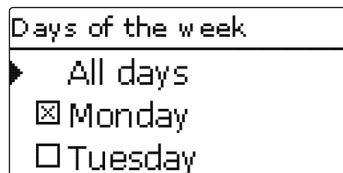

The last menu item after the list of days is **Continue**. If Continue is selected, the **Edit timer** menu opens, in which the time frames can be adjusted.

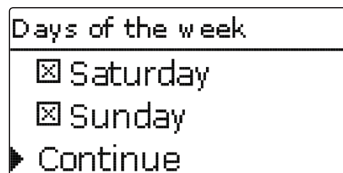

## Adding a time frame:

The time frames can be adjusted in steps of 15 minutes. In order to add an active time frame, proceed as follows:





- ➔ Move the cursor to the desired starting point of the time frame by pressing buttons **2** and **4**. Confirm the starting point of the time frame by pressing button **1**.

- ➔ Move the cursor to the desired ending point of the time frame by pressing buttons **2** and **4**.

- ➔ The end of a time frame can be determined by pressing button **5**.

- ➔ In order to add another time frame, repeat the last 3 steps.





- ➔ Press button **5** again to get back to the overview of current adjustments.

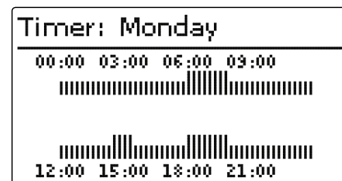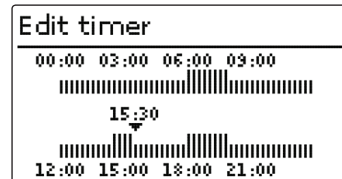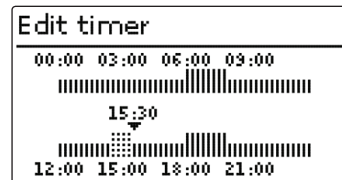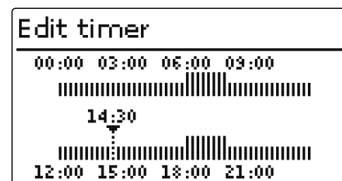


## Removing a time frame:

In order to remove an active time frame, proceed as follows:

- Determine the point from which on the time frame is to be removed by pressing button **3**.
- Move the cursor to the desired ending point of the time frame by pressing buttons **2** and **4**.
- In order to conclude removing the time frame, press button **5** upon reaching the desired ending point.
- Press button **5** again to get back to the overview of current adjustments.

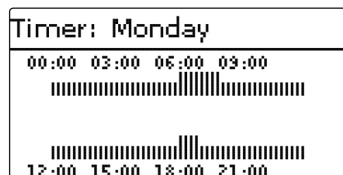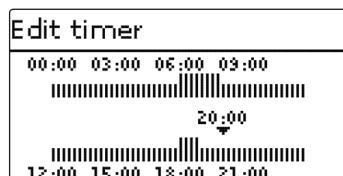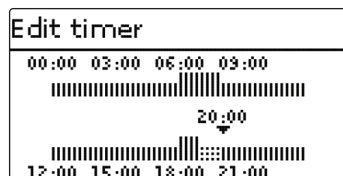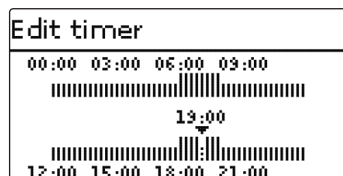

### 4.3 Menu structure

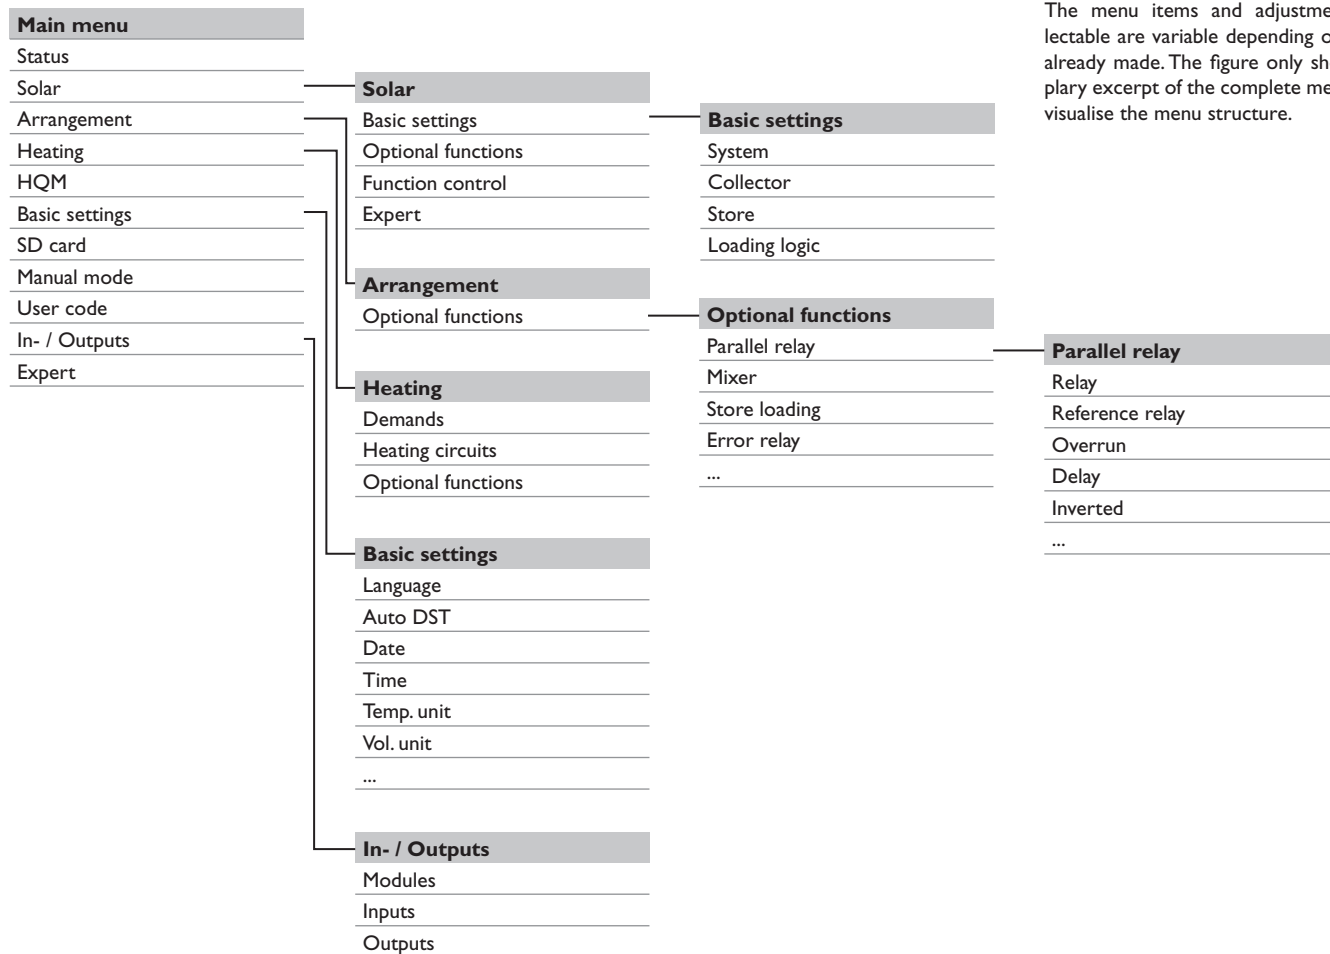

The menu items and adjustment values selectable are variable depending on adjustments already made. The figure only shows an exemplary excerpt of the complete menu in order to visualise the menu structure.

## 5 Initial commissioning


When the hydraulic system is filled and ready for operation, connect the controller to the mains.

The controller runs an initialisation phase in which the directional pad flashes red.

When the controller is commissioned for the first time or when it is reset, it will run a commissioning menu after the initialisation phase. The commissioning menu leads the user through the most important adjustment channels needed for operating the system.


### Commissioning menu

The commissioning menu consists of the channels described in the following. In order to make an adjustment, push button **5**. Adjust the value by pressing buttons **4** and **2**, then push button **5** to confirm. The next channel will appear on the display.

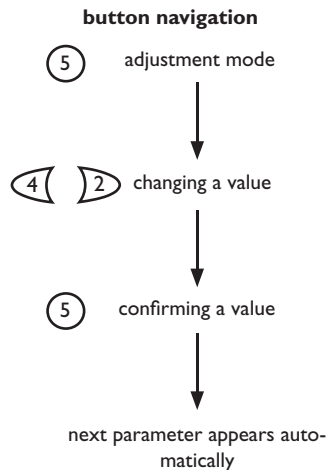

### 1. Language:


→ Adjust the desired menu language.

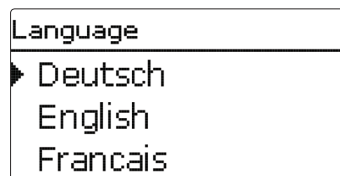

### 2. Scheme:


→ Adjust the scheme number 000

Scheme selection will be made available in an upcoming firmware version.

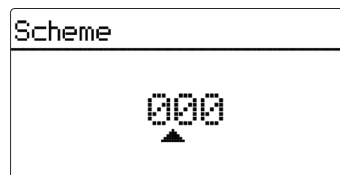


### 3. Units:


→ Adjust the desired temperature unit.

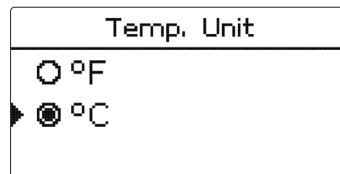

→ Adjust the desired volume unit.

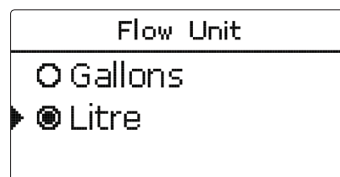

→ Adjust the desired pressure unit.

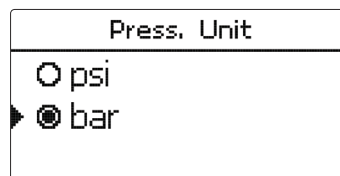

→ Adjust the desired energy unit.

Energy Unit
<input type="radio"/> BTU
▶ <input checked="" type="radio"/> Wh

#### 4. Daylight savings time adjustment:

→ Activate or deactivate the automatic daylight savings time adjustment.

Auto DST
▶ <input checked="" type="radio"/> Yes
<input type="radio"/> No

#### 5. Time:

→ Adjust the clock time. First of all adjust the hours, then the minutes.

Time
12:03 ▲


#### 6. Date:

→ Adjust the date. First of all adjust the year, then the month and then the day.

Date
??.??.2010 ▲

#### 7. Selection of the solar system:

→ Adjust the desired solar system (number of collectors and stores, hydraulic variants).

System
6.2 ▲


System
Save
Yes

#### 8. Completing the commissioning menu:

After the system has been selected, a security enquiry appears. If the enquiry is confirmed, the adjustments will be saved.

→ In order to confirm the security enquiry, press button **5**.

→ In order to reenter the commissioning menu channels, press button **7**.

If the security enquiry has been confirmed, the controller is ready for operation and should enable an optimum system operation.

All adjustments made during commissioning can, if necessary, be changed later on in the **basic settings** menu.

## 5.1 Basic systems and hydraulic variants

### System

Basic settings	
▶ System	6.2
Collector 1	
Collector 2	

The controller is preprogrammed for 9 basic systems. The selection depends on the number of heat sources (collector fields) and heat sinks (stores, pool). Factory setting is system 1.


The selection of the basic solar system is one of the most important adjustments and is thus requested already in the commissioning menu.

First, the basic system is adjusted by means of the number of stores and collectors fields, then the hydraulic variant.

The selected system is visualised by the corresponding number of store and collector symbols. The figure to the left shows system 6 which consists of 3 stores and 2 collector fields ("east- / west collectors").

- System 0: no solar system
- System 1: 1 collector field - 1 store
- System 2: east- / west collectors - 1 store
- System 3: 1 collector field - 2 stores
- System 4: east- / west collectors - 2 stores
- System 5: 1 collector field - 3 stores
- System 6: east- / west collectors - 3 stores
- System 7: 1 collector field - 4 stores

**A solar system with store loading in layers is implemented as a 2-store system (store top = store 1; store bottom = store 2).**

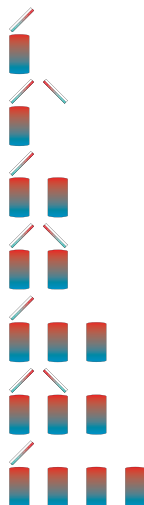

### Variant

Basic settings	
▶ System	6.2
Collector 1	
Collector 2	

The hydraulic variant refers to the different actuators that are to be controlled. They are visualised on the display by means of symbols, when the variant is selected. The upper symbol indicates the actuator belonging to the collector fields, the lower one the actuators belonging to the stores.



The exemplary figure shows the display indicated when system 6, variant 2 has been selected. In this case, each collector field has a 2-port valve, the stores are loaded by means of pump logic.

For each variant, the controller allocates the corresponding relays and sensors. The allocations of the most important combinations are shown in 5.2.



## 5.2 Overview of relay and sensor allocation



### System 1

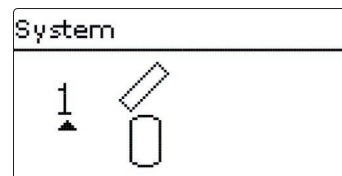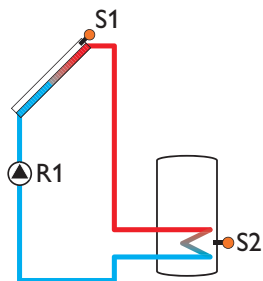

### Relay / sensor allocation

	1	2	3	4	5	6	7	8	9
Relay	Solar pump	Opt. function	Opt. function	Opt. function	Opt. function				
Sensor	Collector 1	Store base	Free	Free	Free	Free	Free	Free	Free


### System 2 variant 1

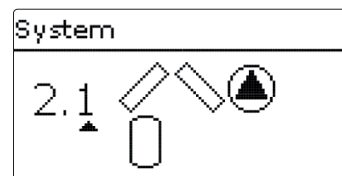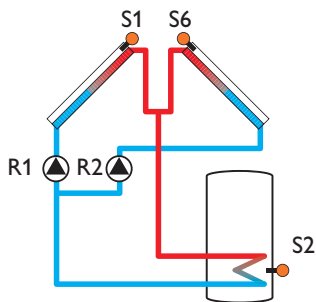

### Relay / sensor allocation




	1	2	3	4	5	6	7	8	9
Relay	Pump coll. 1	Pump coll. 2	Opt. function	Opt. function	Opt. function				
Sensor	Collector 1	Store base	Free	Free	Free	Collector 2	Free	Free	Free

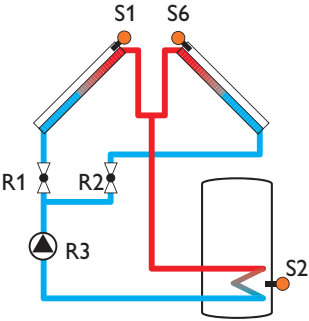System 2 variant 2



System


2.2



Relay / sensor allocation



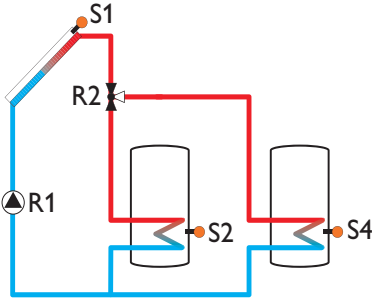

	1	2	3	4	5	6	7	8	9
Relay	2PV coll. 1	2PV coll. 2	Solar pump	Opt. function	Opt. function				
Sensor	Collector 1	Store base	Free	Free	Free	Collector 2	Free	Free	Free

System 3 variant 1



System



3.1



Relay / sensor allocation

	1	2	3	4	5	6	7	8	9
Relay	Solar pump	3PV store 2	Optional function	Optional function	Optional function				
Sensor	Collector	Store 1 base	Free	Store 2 base	Free	Free	Free	Free	Free



### System 3 variant 2

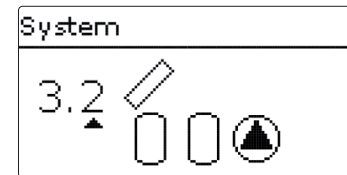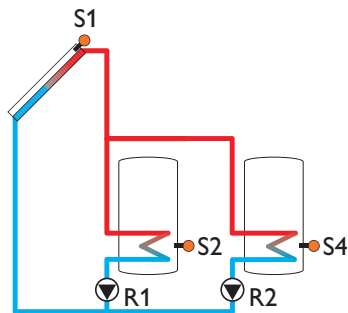

#### Relay / sensor allocation

	1	2	3	4	5	6	7	8	9
Relay	Solar pump store 1	Solar pump store 2	Optional function	Optional function	Optional function				
Sensor	Collector	Store 1 base	Free	Store 2 base	Free	Free	Free	Free	Free


### System 3 variant 3

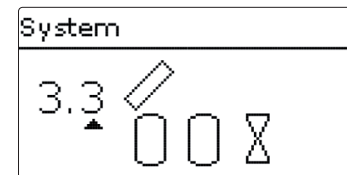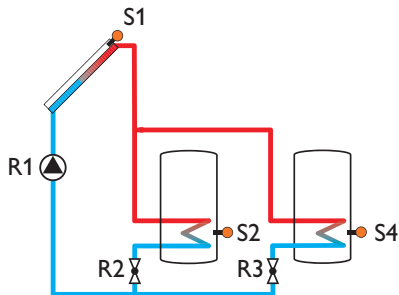

#### Relay / sensor allocation




	1	2	3	4	5	6	7	8	9
Relay	Solar pump	2PV store 1	2PV store 2	Optional function	Optional function				
Sensor	Collector	Store 1 base	Free	Store 2 base	Free	Free	Free	Free	Free



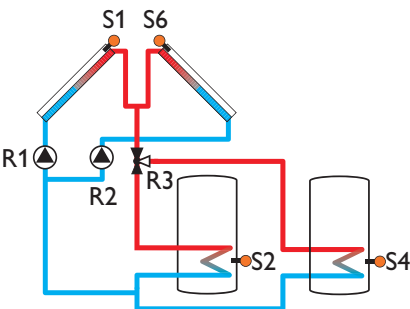
System 4 variant 1



System

4.1






Relay / sensor allocation




	1	2	3	4	5	6	7	8	9
Relay	Pump coll. 1	Pump coll. 2	3PV store 2	Optional function	Optional function				
Sensor	Collector 1	Store 1 base	Free	Store 2 base	Free	Collector 2	Free	Free	Free

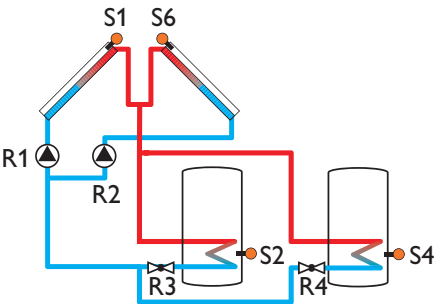


System 4 variant 2



System

4.2







Relay / sensor allocation

	1	2	3	4	5	6	7	8	9
Relay	Pump coll. 1	Pump coll. 2	2PV store 1	2PV store 2	Optional function				
Sensor	Collector 1	Store 1 base	Free	Store 2 base	Free	Collector 2	Free	Free	Free



### System 4 variant 3

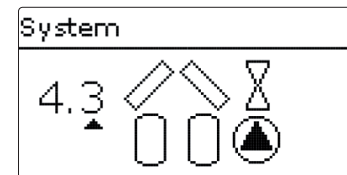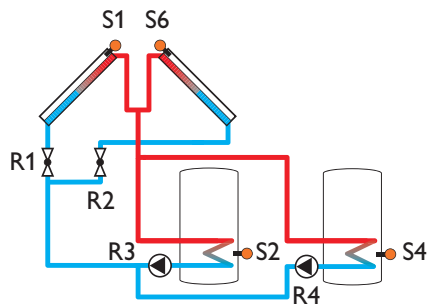

### Relay / sensor allocation

	1	2	3	4	5	6	7	8	9
Relay	2PV coll. 1	2PV coll. 2	Solar pump store 1	Solar pump store 2	Optional function				
Sensor	Collector 1	Store 1 base	Free	Store 2 base	Free	Collector 2	Free	Free	Free


### System 4 variant 4

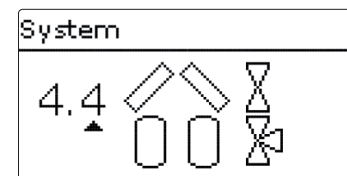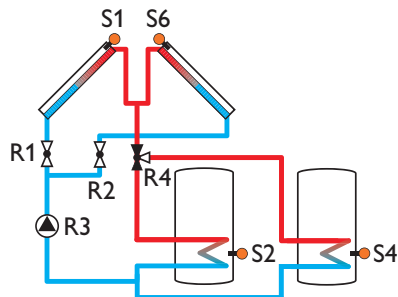

### Relay / sensor allocation

	1	2	3	4	5	6	7	8	9
Relay	2PV coll. 1	2PV coll. 2	Solar pump	3PV store 1	Optional function				
Sensor	Collector 1	Store 1 base	Free	Store 2 base	Free	Collector 2	Free	Free	Free

System 5 variant 1

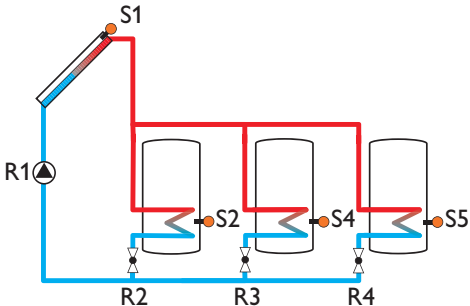

System


5.1

000

Relay / sensor allocation

	1	2	3	4	5	6	7	8	9
Relay	Solar pump	2PV store 1	2PV store 2	2PV store 3	Optional function				
Sensor	Collector 1	Store 1 base	Free	Store 2 base	Store 3 base	Free	Free	Free	Free

System 5 variant 2

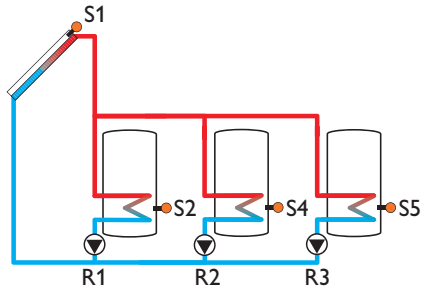

System



5.2

000

Relay / sensor allocation

	1	2	3	4	5	6	7	8	9
Relay	Solar pump store 1	Solar pump store 2	Solar pump store 3	Optional function	Optional function				
Sensor	Collector 1	Store 1 base	Free	Store 2 base	Store 3 base	Free	Free	Free	Free



### System 5 variant 3

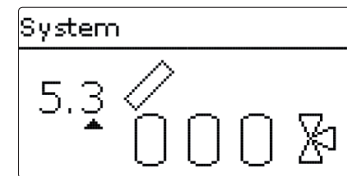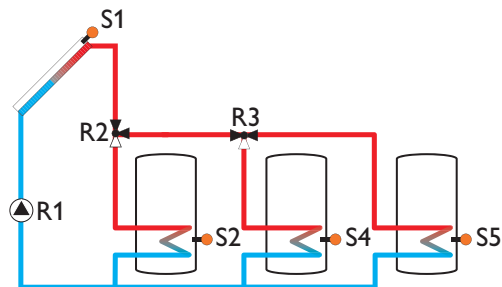

### Relay / sensor allocation

	1	2	3	4	5	6	7	8	9
Relay	Solar pump	3PV store 1	3PV store 2	Optional function	Optional function				
Sensor	Collector 1	Store 1 base	Free	Store 2 base	Store 3 base	Free	Free	Free	Free


### System 6 variant 1

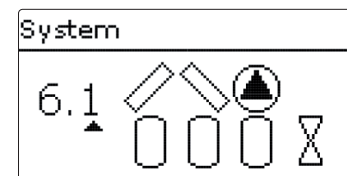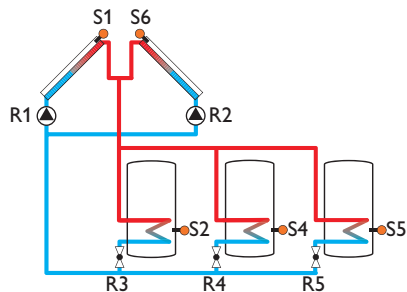

### Relay / sensor allocation



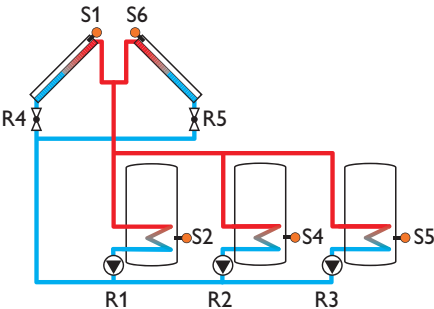

	1	2	3	4	5	6	7	8	9
Relay	Pump coll. 1	Pump coll. 2	2PV store 1	2PV store 2	2PV store 3				
Sensor	Collector 1	Store 1 base	Free	Store 2 base	Store 3 base	Collector 2	Free	Free	Free

System 6 variant 2



System


6.2



Relay / sensor allocation



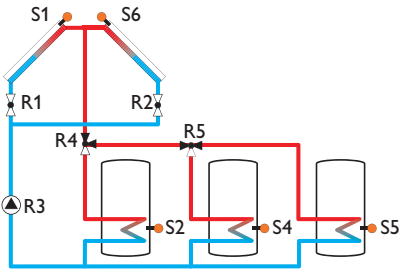


	1	2	3	4	5	6	7	8	9
Relay	Solar pump store 1	Solar pump store 2	Solar pump store 3	2PV coll. 1	2PV coll. 2				
Sensor	Collector 1	Store 1 base	Free	Store 2 base	Store 3 base	Collector 2	Free	Free	Free

System 6 variant 3



System

6.3




Relay / sensor allocation

	1	2	3	4	5	6	7	8	9
Relay	2PV coll. 1	2PV coll. 2	Solar pump	3PV store 1	3PV store 2				
Sensor	Collector 1	Store 1 base	Free	Store 2 base	Store 3 base	Collector 2	Free	Free	Free



System 6 variant 4

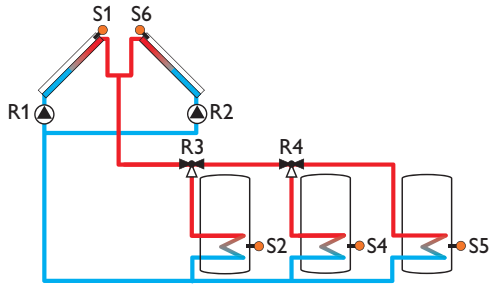


System

6.4

Relay / sensor allocation

	1	2	3	4	5	6	7	8	9
Relay	Pump coll. 1	Pump coll. 2	3PV store 1	3PV store 2	Optional function				
Sensor	Collector 1	Store 1 base	Free	Store 2 base	Store 3 base	Collector 2	Free	Free	Free

System 7 variant 1

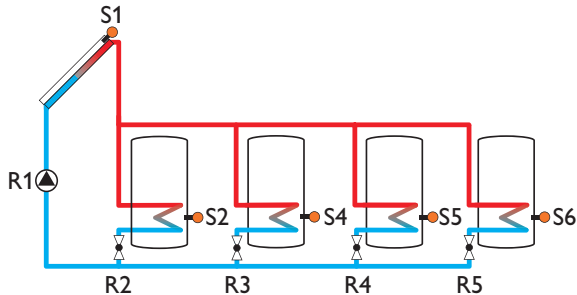


System

7.1

Relay / sensor allocation

	1	2	3	4	5	6	7	8	9
Relay	Solar pump	2PV store 1	2PV store 2	2PV store 3	2PV store 4				
Sensor	Collector 1	Store 1 base	Free	Store 2 base	Store 3 base	Store 4 base	Free	Free	Free

System 7 variant 2

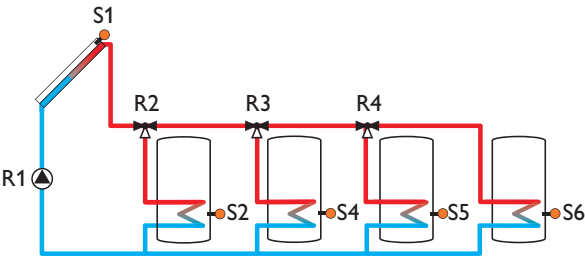

System


7.2

4x

Relay / sensor allocation

	1	2	3	4	5	6	7	8	9
Relay	Solar pump	3PV store 1	3PV store 2	3PV store 3	Optional function				
Sensor	Collector 1	Store 1 base	Free	Store 2 base	Store 3 base	Store 4 base	Free	Free	Free

System 7 variant 3

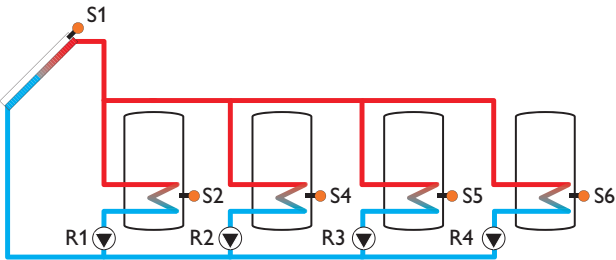

System


7.3

4x

Relay / sensor allocation

	1	2	3	4	5	6	7	8	9
Relay	Solar pump store 1	Solar pump store 2	Solar pump store 3	Solar pump store 4	Optional function				
Sensor	Collector 1	Store 1 base	Free	Store 2 base	Store 3 base	Store 4 base	Free	Free	Free

## 6 Main menu

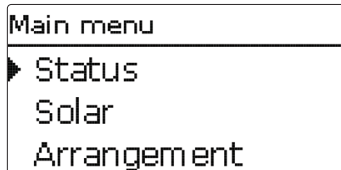


During normal operation, the display of the controller shows the main menu. From here, the different menu areas can be selected.

The following menus are available:

- Status
- Solar
- Arrangement
- Heating
- HQM
- Basic settings
- SD card
- Manual mode
- User code
- In- / Outputs
- Expert

→ Select the menu area by pressing buttons  and




→ Press button  in order to enter the selected menu




### Note

When no button is pressed for 1 minute, the display illumination stops. After 3 more minutes, the controller switches into the Status menu.


→ In order to access the main menu, press button .

## 7 Status

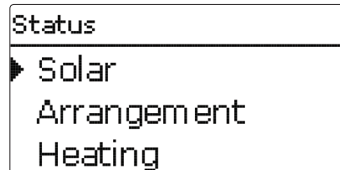


In the **Status** menu, the status messages for every menu area can be found.

### 7.1 Solar

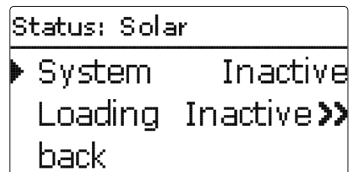


In the **Status / Solar** menu, the status of the solar system, the solar loading and the selected optional functions are indicated.

### 7.2 Arrangement

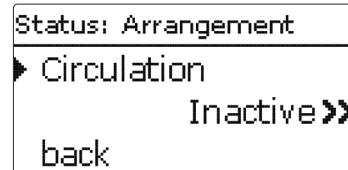

In the **Status / Arrangement** menu, the status of the selected optional functions is indicated.

### 7.3 Heating

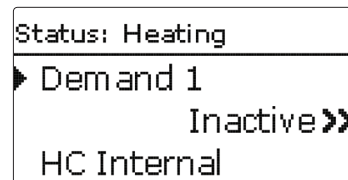

In the **Status / Heating** menu, the status of the demands and heating circuits activated as well as of the selected optional functions is indicated.



In the **Status / Messages** menu, error and warning messages are indicated.

During normal operation, the message **Everything OK** is indicated.

When a monitoring function from the function control is activated and detects a fault condition, a corresponding message is indicated (see table).

A message consists of the name of the monitoring function, a 4-digit error code and a short text description of the fault condition.

In order to acknowledge the message, proceed as follows:

- ➔ Select the code line of the desired message by pressing buttons **2** and **4**.
- ➔ Acknowledge the message by pressing button **5**.
- ➔ Confirm the security enquiry by selecting **Yes**.

When the expert user code has been entered, the menu item **Restarts** will appear below the messages. The number indicates how many restarts the controller went through since commissioning. This value cannot be reset.

## Messages

Error codes	Indication	Monitoring function	Error cause
0001	!Sensor fault!	Sensor cable broken	Sensor cable broken
0002	!Sensor fault!	Sensor cable short-circuited	Sensor cable short-circuited
0011	!ΔT too high!	ΔT too high	Collector 50 K > than store to be loaded
0021	!Night circulation!	Night circulation	Betw. 11 pm and 5 am col. temp > 40 °C
0031	!FL/RE interchanged!	FL/RE interchanged	Col. temp. does not rise after switching on
0041	!Flow r. monit.!	Flow rate monitoring	No flow rate at sensor
0051	!Overpressure!	Overpressure monitoring	Overpressure reached
0052	!Low pressure!	Low pressure monitoring	Low pressure reached
0061	Data storage!	Storing and changing values not possible	
0071	!RTC!	Time-controlled functions (e. g. night correction) not possible	
0081	!Store max. temp.!	Maximum store temperature	St. max has been exceeded
	Restarts	Restart counter (non-adjustable)	Number of restarts since commissioning

## 7.5 Meas. / Balance values

Status: Meas. values	
► Solar	
System	»»
Arrangement	

In the **Status / Meas. / Balance values** menu, all current measurement values as well as a range of balance values are displayed. Some of the menu items can be selected in order to enter a submenu.

Additionally, all optional functions selected, the operating hours counter as well as activated heat quantity measurements are displayed.

System	
► Collector 1	
S1	70 °C»»
Collector 2	


If, for example, **Solar / System** is selected, a submenu with the sensors and relays allocated to the solar system opens. In the submenu, the current temperatures and the current pump speed are displayed.

When a line with a measurement value is selected, another submenu will open.

S1	
Minimum	16.4 °C
► Maximum	105.2 °C
back	

If, for example, S1 is selected, a submenu indicating the minimum and maximum values will open.

When the item **Chart** is selected, a progression chart appears.

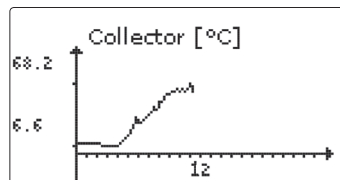

The progression chart shows the development of the temperature at the corresponding sensor over the last 24 hours. Press buttons **2** and **4** to switch back and forth between a chart of the current day and one of the day before.

## 7.6 Service

Service	
► <input type="checkbox"/> Controller	
S1	
Collector 1	

In the **Status / Service** menu, each sensor and relay is indicated with the component or function it has been allocated to. For free sensors and relays, **Free** is indicated.

## 8 Solar

Solar	
► Basic settings	
Opt. functions	
Expert	

In this menu, all adjustments for the solar part of the arrangement can be made. The Solar menu consists of the following submenus:

- Basic settings
- Optional functions
- Expert


### 8.1 Basic solar settings

In the **Basic settings** menu, all basic settings for the solar part of the arrangement can be adjusted.

In this menu, the hydraulic system, which is the basis for the arrangement, can be adjusted. The setting is divided into systems and variants.


Both system and variant have usually been adjusted during commissioning. If the setting is changed later on, all adjustments for the new solar part of the arrangement are set back to their factory settings.

If the change causes the solar system to require a relay that has been allocated to an arrangement function before, all adjustments made in the non-solar part will be set back to their factory settings as well.

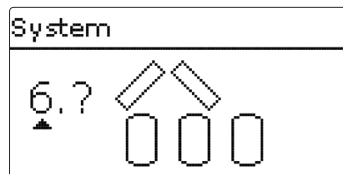


First of all, the basic solar system can be selected according to the number of stores and collector fields in use. The corresponding numbers are indicated on the display.

The exemplary figure shows system 6 with its 3 stores and 2 collector fields (east- / west collectors).

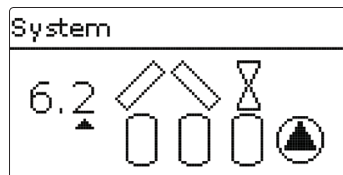


When the basic system has been selected and confirmed, the hydraulic variant can be selected. The variant is visualised on the display by means of pump and valve symbols. The exemplary figure shows variant 2 of system 6 with a 2-port valve and a pump. For an overview of the basic systems and their variants see page 17.

The controller supports up to 2 collector fields and up to 4 solar stores (with 2 collector fields only up to 3 solar stores).

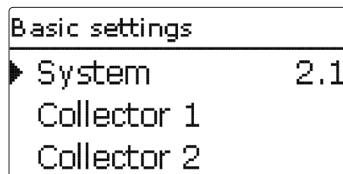

The following items in the **Solar / Basic settings** menu will adjust to the system selected.

### Collector (1/2)

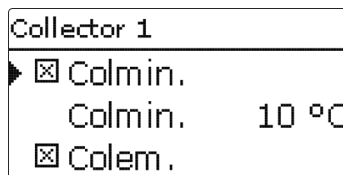

In systems with 2 collector fields, 2 separate menu items (**Collector 1** and **Collector 2**) are displayed instead of **Collector**.

For each collector field, a collector minimum limitation and a collector emergency shutdown temperature can be adjusted.

### Solar / Basic settings / Collector (1/2)

Adjustment channel	Description	Adjustment range / selection	Factory setting
Colmin.	Minimum collector limitation	Yes, No	Yes
Colmin.	Minimum collector temperature	10 ... 90 °C [50 ... 194 °F]	10 °C [50 °F]
Colem.	Collector emergency shutdown	Yes, No	Yes
Colem.	Collector emergency temperature	80 ... 200 °C [176 ... 392 °F]	130 °C [266 °F]

## Store (1 / 2 / 3 / 4)

Store	
▶ ΔTon	6.0 K
ΔToff	4.0 K
ΔTset	10.0 K

In systems with 2 or more stores, the corresponding number of separate menu items (**Store 1** to **Store 4**) is displayed instead of **Store**.

For each store, an individual ΔT control, a set and a maximum temperature, the priority, a hysteresis, a rise value, a minimum runtime and a minimum pump speed can be adjusted.

In multi-store-systems with differing Store set / Maximum store temperatures, all stores are loaded up to their Stset temperatures first (according to their priority and the store sequence control). Only when all stores have exceeded Stset will they be loaded up to their Stmax temperatures, again according to their priority and the store sequence control.

## Solar / Basic settings / Store (1 / 2 / 3 / 4)

Adjustment channel	Description	Adjustment range / selection	Factory setting
ΔTon	Switch-on temperature difference	1.0 ... 20.0 K [2.0 ... 40.0 °Ra]	6.0 K [12.0 °Ra]
ΔToff	Switch-off temperature difference	0.5 ... 19.5 K [1.0 ... 39.0 °Ra]	4.0 K [8.0 °Ra]
ΔTset	Set temperature	1.5 ... 30.0 K [1.5 ... 60.0 °Ra]	10.0 K [20.0 °Ra]
Stset	Store set temperature	4 ... 95 °C [40 ... 204 °F]	45 °C [114 °F]
Stmax	Maximum store temperature	4 ... 95 °C [40 ... 204 °F]	60 °C [140 °F]
Priority	Priority	1	1 ... 4 (system-dependent)
HysSt	Hysteresis maximum store temperature	0.1 ... 10.0 K [0.2 ... 20.0 °Ra]	2.0 K [4.0 °Ra]
Rise	Rise	1.0 ... 20.0 K [2.0 ... 40.0 °Ra]	2.0 K [4.0 °Ra]
tmin	Minimum runtime	0 ... 300 s	180 s
Min speed.	Minimum speed	(20) 30 ... 100 %	30 %
Deactivated	Blocked for solar loading	Yes, No	No

## Loading logic

Load. logic	
▶ Load. break	2 min
Circ.	15 min
<input type="checkbox"/> Break speed	

In systems with 2 or more stores, loading logic adjustments can be made in this menu.

In systems 1 and 2, only the menu item **Pump delay** will be available.

### Store sequence control:

If the priority store cannot be loaded, the subordinate store next in priority is checked. If useful heat can be added, it will be loaded for the circulation time (**Circ.** – factory setting 15 min.) After this, the loading

process stops and the controller monitors the increase in collector temperature during the loading break time **Load. break**. If it increases by 2 K [4° Ra], the break time timer starts again to allow the collector to gain more heat. If the collector temperature does not increase sufficiently, the subordinate store will be loaded again for the **Circ.** time as before.

As soon as the switch-on condition of the priority store is fulfilled, it will be loaded. If the switch-on condition of the priority store is not fulfilled, loading of the second store will be continued. If the priority store reaches its maximum temperature, store sequence control will not be carried out.

If store sequence control is active and the system switches to load the priority store, the parameter **Load. break** also acts as a stabilisation timer, during which the switch-off condition is ignored while the system operation stabilises.

## Solar / Basic settings / Loading logic

Adjustment channel	Description	Adjustment range / selection	Factory setting
Load. break	Loading break time	1 ... 5 min	2 min
Circ.	Circulation time	1 ... 60 min	15 min
Break speed	Pause speed	Yes, No	No
Speed	Pause speed	(20) 30... 100 %	30 %
Pump delay	Pump delay	Yes, No	No
Delay	Delay time	5 ... 600 s	15 s



Add new function	
▶ Bypass	
CS bypass	
Ext. HX	

In this menu, additional functions can be selected and adjusted for the solar part of the arrangement.

By selecting **Add new function...**, different pre-programmed functions can be selected. The optional functions are available as long as free relays are available.

Bypass	
▶ Collector	1,2
Relay	R4
Variant	Pump

When a function is selected, a submenu opens in which all adjustments required can be made.

With this menu item, a relay and, if necessary, certain system components can be allocated to the function.

Relay selec.	
▶ <input type="checkbox"/> Controller	
R4	
R5	

The menu item **Relay selec.** is available in all optional functions. Therefore, it will not be explained in the individual function descriptions.

With this menu item, a relay can be allocated to the function. All free relays are available for selection.

In the submenu **Controller**, all free relays of the controller are displayed. If external modules are connected and registered, their relays will be displayed in corresponding submenus.

Solar / Opt. functions	
▶ Cooling mode	
Drainback	
Add new function	

When a function has been selected and adjusted, it will appear in the **Opt. functions** above the menu item **Add new function...**

This allows an easy overview of functions already activated.

An overview about which sensor has been allocated to which component and which relay has been allocated to which function is given in the **Status/Service** menu.

Bypass	
ΔToff	4.0 K
Funct.	Activated
▶ Delete function	

At the end of each optional function submenu, the menu items **Funct.** and **Delete function** are available.

Funct.	
▶ <input checked="" type="radio"/> Activated	
<input type="radio"/> Deactivated	

With the menu item **Funct.**, an optional function already selected can be temporarily deactivated or re-activated respectively. All adjustments remain stored, the allocated relays remain occupied and cannot be allocated to another function.

Bypass	
Reset?	No

If the menu item **Delete function** is confirmed by pressing button **5**, a security enquiry appears. The setting can be changed between **Yes** and **No** by pressing buttons **2** and **4**. If **Yes** has been selected and confirmed by pressing button **5**, the function is deleted and available under **Add new function...** again. The corresponding relays are available again.


## Bypass

Bypass	
▶ Collector	1,2
Relay	R4
Variant	Pump


In order to prevent energy from being extracted from the store when starting store loading, this function makes sure that the cold fluid in the pipes is diverted past the store via a bypass (valve or pump). Once the pipe is warm enough, the store can be loaded. The switch-on conditions can be adjusted individually.

Variant
<input type="radio"/> Valve
▶ <input checked="" type="radio"/> Pump


### Variant pump:

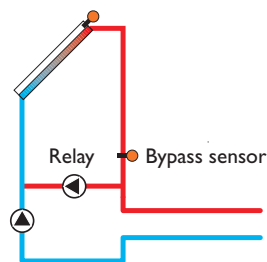

### Variant valve:

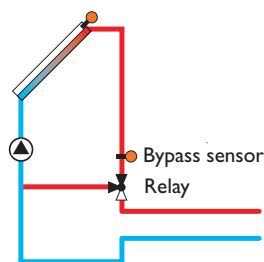

### Variant valve (inverted):

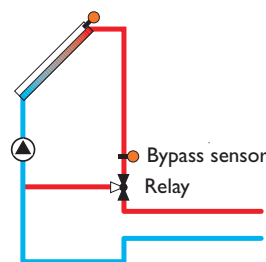

Exemplary schematics for the bypass variants

Depending on whether the bypass is energised by a valve or by a second pump, a corresponding adjustment can be made in the menu item **Variant**. Depending on the variant, different control logics are applied:

#### Pump:

In this version, a bypass pump is placed in front of the collector pump.

The bypass pump is first activated when store loading is possible. If the switch-on condition is fulfilled, the bypass pump is switched off and the collector circuit pump is activated.

#### Valve:

A bypass valve is placed into the solar circuit.

The solar heat exchanger is first bypassed when store loading is possible. If the above-mentioned switch-on condition is fulfilled, the bypass relay switches the collector circuit via the heat exchanger.

When the valve variant is selected, the option **Inverted** is additionally available. When the Inverted option is activated and the bypass circuit becomes activated, the relay switches on. When solar loading starts, the relay switches off again (see figure).

## Solar / Opt. functions / Add new function.../ Bypass

Adjustment channel	Description	Adjustment range / selection	Factory setting
Collector	Collector field	system dependent	system dependent
Relay	Bypass relay	system dependent	system dependent
Variant	Variant (pump or valve logic)	pump, valve	pump
Inverted	Valve logic inversion	Yes, No	No
Sensor	Bypass sensor	system dependent	system dependent
ΔTon	Switch-on temperature difference	1.0 ... 20.0 K [2.0 ... 40.0 °Ra]	6.0 K [12.0 °Ra]
ΔToff	Switch-off temperature difference	0.5 ... 19.5 K [1.0 ... 39.0 °Ra]	4.0 K [8.0 °Ra]
Funct.	Activation / Deactivation	Activated, Deactivated	Activated



#### Note:

In multi-store systems with pump logic, the variant valve is not available.

## CS bypass

CS bypass	
▶ Collector	1,2
Irrad.	200 W/m <sup>2</sup>
Delay	120 s

The **CS bypass function** is a different possibility to activate the collector circuit. To enable the use of the CS bypass function, a CS10 irradiation sensor has to be connected.

When the CS bypass function is activated, the irradiation value is the switch-on condition for the collector circuit.

The relay remains switched on if the irradiation value is exceeded for the delay time. When solar loading begins or the irradiation value remains below the switch-on value for the delay time, the relay is switched off.

When the **Stmax off** option is activated, collector circuit activation is suppressed as long as all store temperatures are above their respective maximum temperatures.

## Solar / Opt. functions / Add new function.../ CS bypass

Adjustment channel	Description	Adjustment range / selection	Factory setting
Collector	Collector field	system dependent	system dependent
Irrad.	Switch-on irradiation	100 ... 500 W/m <sup>2</sup>	200 W/m <sup>2</sup>
Delay	Delay time	10 ... 300 s	120 s
Stmax off	Stmax switch-on suppression	Yes, No	Yes
Funct.	Activation / Deactivation	Activated, Deactivated	Deactivated

## Tube collector function

Tube collector	
▶ Start	08:00
Stop	19:00
Run	30 s

### Solar / Opt. functions / Add new function.../Tube collector

Adjustment channel	Description	Adjustment range / selection	Factory setting
Start	Start time frame	00:00 ... 23:00	08:00
Stop	Stop time frame	00:30 ... 23:30	19:00
Run	Pump runtime	5 ... 600 s	30 s
Break	Break	1 ... 60 min	30 min
Delay	Pump delay	5 ... 600 s	30 s
Collector	Collector field	system dependent	system dependent
Funct.	Activation / Deactivation	Activated, Deactivated	Deactivated

This function helps overcome the non-ideal sensor position with some tube collectors.

This function operates within an adjusted time frame. It activates the collector circuit pump for an adjustable runtime between adjustable pauses in order to compensate for the delayed temperature measurement.

If the runtime is set to more than 10 s, the pump will be run at 100 % for the first 10 s of the runtime. For the remaining runtime, the pump will be run at the adjusted minimum speed.

If the collector sensor is defective or the collector is blocked, this function is suppressed or switched off.

### 2-collector systems

In 2-collector systems, the tube collector function is available for each individual collector field.

If one of the collector fields is being loaded, the heat transfer fluid flows through the inactive field and only the corresponding relay is energised.

### Multi-store systems

If the tube collector function is activated, the speed of the solar pump will decrease to the minimum speed during the loading break time. The solar loading of the subordinate store will continue.

In 2-collector systems, during the loading break time, the collector field which has been active before the loading break time remains active during the loading break time, unless the tube collector function of the inactive field becomes active.

## Target temperature

Target temp.	
▶ Target temp.	65 °C
Sensor	S5
Rise	2.0 K

### Solar / Opt. functions / Add new function.../Target temperature

Adjustment channel	Description	Adjustment range / selection	Factory setting
Targ. temp.	Target temperature	20 ... 110 °C [68 ... 230 °F]	65 °C [150 °F]
Sensor	Reference sensor	system dependent	system dependent
Rise	Rise	1.0 ... 20.0 K [2.0 ... 40.0 °Ra]	2.0 K [4.0 °Ra]
Funct.	Activation / Deactivation	Activated, Deactivated	Deactivated

## Antifreeze

Antifreeze	
▶ Frost on	4 °C
Frost off	6 °C
Collector	1

### Solar / Opt. functions / Add new function.../Antifreeze

Adjustment channel	Description	Adjustment range / selection	Factory setting
Frost on	Antifreeze switch-on temperature	-40 ... +15 °C [-40 ... +58 °F]	+4 °C [+40 °F]
Frost off	Antifreeze switch-off temperature	-39 ... +16 °C [-39 ... +60 °F]	+6 °C [+44 °F]
Collector	Collector field	system dependent	system dependent
Store (1 ... 4)	Store order	system dependent	system dependent
Funct.	Activation / Deactivation	Activated, Deactivated	Deactivated

When the **Target temperature** function is activated, the pump speed control logic changes. The controller will remain at the minimum pump speed until the temperature at the allocated sensor exceeds the adjusted target temperature. Only then will the standard pump speed control start to operate. If the temperature at the allocated sensor changes by the adjusted **Rise** value, the pump speed will be adjusted correspondingly.

If the **Ext. HX** (see page 40) function has been activated, too, the target temperature control will pause while the external heat exchanger is loaded. While the external heat exchanger is loaded, its own pump speed control will come into effect.

As soon as the temperature at the collector is 4 °C [40 °F], the antifreeze function operates the loading circuit between the collector and the 1st store in order to protect the heat transfer fluid in the loading circuit against freezing or coagulation.

If the collector temperature exceeds 6 °C [44 °F], this function is switched off.

Heat will be extracted from the stores according to the adjusted order. If all stores have reached their minimum temperature of 5 °C [42 °F], the function becomes inactive.

The minimum pump speed is set to 100 %.

In 2-collector systems, the antifreeze menu is extended. The adjustment channels are separated numerically.

## Afterheating suppression

AH Suppression	
► Relay	R5
Store	1,2
<input type="checkbox"/> Tset	

## Solar / Opt. functions / Add new function.../ AH suppress.

Adjustment channel	Description	Adjustment range / selection	Factory setting
Relay	Reference relay	system dependent	system dependent
Store	Sensor selection	system dependent	system dependent
Tset	Set temperature	Yes, No	No
Funct.	Activation / Deactivation	Activated, Deactivated	Deactivated

## Parallel relay

Parallel relay	
► Relay	R3
Store	1
Funct.	Activated

## Solar / Opt. functions / Add new function.../ Parallel relay

Adjustment channel	Description	Adjustment range / selection	Factory setting
Relay	Parallel relay	system dependent	system dependent
Store	Sensor selection	system dependent	system dependent
Funct.	Activation / Deactivation	Activated, Deactivated	Deactivated

The **Afterheating suppression** blocks the conventional afterheating of a store that is currently in solar loading.

This function is activated if a previously selected **Store** is being loaded.

Solar loading means that store loading is only carried out for energy supply and not for cooling purposes etc. If the **Tset** option is activated, the afterheating will only be suppressed when the store temperature exceeds Tset.

With this function, e. g. a valve can be controlled in parallel to a solar pump via a separate relay.

Switch-on condition for the solar parallel relay function is that one or more of the selected stores is being loaded. If at least one of the selected stores is being loaded, the parallel relay is energised.

The parallel relay function operates regardless whether the store is subjected to regular solar loading or to a loading caused by an optional function (such as the collector cooling).



### Note:

If a relay is in the manual mode, the selected parallel relay will not be energised.

## Cooling mode

In the **Cooling mode** menu, different cooling functions are available. They can be used for keeping the solar system operational for a longer time during strong solar irradiation.

For this purpose, the adjusted maximum store temperatures can be exceeded. The store order for this overloading can be adjusted. Additionally, each individual store can be excluded from this function.

Two different variants are available for the cooling mode: the system cooling and the collector cooling.

Cooling mode	
► Var.	Off
Store 1	-
St cooling	No

### System cooling:

If the system cooling variant has been selected and the switch-on temperature difference is exceeded, store loading is continued even if the corresponding maximum temperature is exceeded, but only up to the emergency shutdown temperature. Store loading continues until all stores have reached the emergency shutdown temperature or until the switch-off temperature difference is reached.

### Collector cooling:

If the collector cooling variant has been selected, store loading is continued or reactivated when the collector maximum temperature is exceeded.

Store loading continues until all stores have reached the emergency shutdown temperature or until the collector temperature falls below the collector maximum temperature by at least 5 K [10°Ra].

In 2-collector systems, separate adjustments can be made for each collector field.

The control logic regards collector cooling operation as solar loading. The adjusted values for delay, minimum runtime, etc. remain valid.

In addition to the cooling mode, store cooling is available.

### Store cooling:

When the store cooling function is activated, the controller aims to cool down the store during the night in order to prepare it for solar loading on the following day.

When the store cooling function is activated, the solar pump is switched on if the maximum store temperature is exceeded and the collector temperature falls below the store temperature. The solar pump remains active until the store temperature falls below the adjusted maximum store temperature.

The store order for the cooling is the same as in the overheating through system- or collector cooling.

Cooling mode	
► <input checked="" type="checkbox"/> Holiday	
Activ.	Timer
On 17.11.2010	

The holiday function works like the store cooling function but aims to cool the store further down during times without DHW consumption in order to prepare it for solar loading on the following day. This function can only be activated if the store cooling function is activated.

The holiday function can either be activated manually when a phase with no DHW consumption begins, or a time frame, during which the function is to become active, can be set in advance. If **manual** is selected, an input can be allocated to the function. When a switch is connected to the allocated input, it will act as an on/off switch for the holiday function.

## Solar / Opt. functions / Add new function.../ Cooling mode

Adjustment channel	Description	Adjustment range / selection	Factory setting
Variant	Cooling logic variant	Col. cool, Syst. cool., Off	Off
Tcolmax.	Collector maximum temperature	70 ... 190 °C [158 ... 374 °F]	100 °C [212 °F]
Store (1 ... 4)	Store order	system dependent	system dependent
St cooling	Store cooling	Yes, No	No
ΔTon	Switch-on temperature difference	1.0 ... 30.0 K [2.0 ... 60.0 °Ra]	20.0 K [40.0 °Ra]
ΔToff	Switch-off temperature difference	0.5 ... 29.5 K [1.0 ... 59.0 °Ra]	15.0 K [30.0 °Ra]
Holiday	Holiday function	Yes, No	No
Activation	Activation mode	Manual, Timer	Timer
On	Holiday function switch-on date	Dates up to 31.12.2099	Current date
Off	Holiday function switch-off date	Dates up to 31.12.2099	ON + 7 days
Input	Holiday function switch input	system dependent	system dependent
Stmax (1 ... 4)	Maximum store temperature	4 ... 95 °C [40 ... 204 °F]	40 °C [104 °F]
	Holiday function		

## Solar external heat exchanger

Ext. HX	
Relay	R4
Min speed	30%
Store	1

## Solar / Opt. functions / Add new function.../ Ext. HX

Adjustment channel	Description	Adjustment range / selection	Factory setting
Relay	Relay selection	system dependent	system dependent
Min speed	Minimum speed	(20) 30 ... 100 %	30 %
Store	Sensor selection	system dependent	1
Sensor HX	Reference sensor ext.HX	system dependent	system dependent
Targ. temp.	Target temperature option	Yes, No	No
Sensor	Target temperature reference sensor	system dependent	system dependent
Targ. temp.	Target temperature	15 ... 95 °C [60 ... 204 °F]	60 °C [140 °F]
ΔTon	Switch-on temperature difference	1.0 ... 20.0 K [2.0 ... 40.0 °Ra]	10.0 K [20.0 °Ra]
ΔToff	Switch-off temperature difference	0.5 ... 19.5 K [1.0 ... 39.0 °Ra]	5.0 K [10.0 °Ra]
Overrun	Overrun time	1 ... 15 min	2 min

This function is used to link loading circuits that are separated by an external heat exchanger.

The allocated relay is energised if one of the selected stores is being loaded and there is a temperature difference between the sensor of the corresponding store and the solar flow.

Any number of the solar stores can be selected.

The relay is switched off if this temperature difference falls below the adjusted switch-off difference.

In contrast to the bypass function, a differential control between **Sensor HX** and the store temperature can be carried out by means of the heat exchanger relay.

The reference sensor can be arbitrarily allocated.

In systems in which stores are equipped with their own loading pumps, the relay "external heat exchanger" controls the primary circuit pump.

The heat exchanger is protected by a non-adjustable antifreeze function.




### Note:

Because of the special hydraulics, the target temperature option will not work properly in systems with 2 collector fields.



## Drainback option

Drainback	
Filling time	5 min
Stab. time	2.0 min
Initialis.	60 s

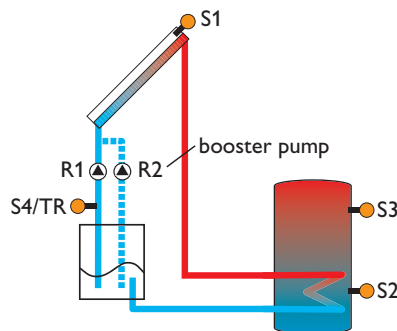

Exemplary drainback system layout  
(R2 = booster pump)

A drainback system permits the heat transfer fluid to drain back into the holding tank when solar energy is not collected. The **Drainback option** will initiate the filling of the system when solar loading begins.



### Note:

A drainback system requires additional components such as a holding tank. The drainback option should only be activated if all components required are properly installed.

The parameter **Filling time** is used to adjust the time period for which the pump will be run at 100 % speed in order to fill the system.

The parameter **Stabilisation** is used for adjusting the time period during which the switch-off condition will be ignored after the filling time has ended.

The parameter **Initialis.** is used for adjusting the time period during which the switch-on condition must be permanently fulfilled for the filling procedure to start.

The **Booster** option is used for switching on a second pump when filling the solar system. The corresponding relay is switched on at 100 % speed for the duration of the filling time.


A short time (Delay time) after the system has been emptied, the **Drain impulse** option will switch on the solar pump for an adjustable **Duration**. Thus, a hydrostatic head will form in the flow pipe. When it falls back into the holding tank, water pockets remaining in the collector will be sucked down into the holding tank.

## Solar / Opt. functions / Add new function.../ Drainback

Adjustment channel	Description	Adjustment range / selection	Factory setting
Filling time	Filling time	1 ... 30 min	5 min
Stab. time	Stabilisation time	1.0 ... 15.0 min	2.0 min
Initialis.	Initialisation time	1 ... 100 s	60 s
Booster	Booster option	Yes, No	No
Relay	Booster pump relay selection	system dependent	system dependent
Drain impulse	Drain impulse option	Yes, No	No
Delay	Delay time	1 ... 30 min	3 min
Duration	Drain impulse loading duration	1 ... 60 s	10 s
Funct.	Activation / Deactivation	Activated, Deactivated	Deactivated

## Twin pump

Twin pump	
Relay	R5
▶ Reference relay	R3
Runtime	6 h

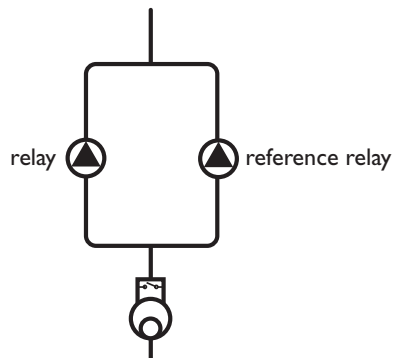

Exemplary figure of twin pumps in the solar flow with upstream flowmeter

The **Twin pump** function controls the equal distribution of pump runtime in systems with two equally usable pumps.

If the allocated relay has exceeded its adjusted runtime and the next switch-on process is imminent, the reference relay is switched on instead. All characteristics are adopted.

If the reference relay has in turn exceeded its runtime as well, the first relay is switched on again in the next switch-on process.

Additionally, the **Flow rate monitoring** option can be activated in order to activate the twin pump in the case of a flow rate error. When the flow rate monitoring option is activated, two additional adjustment channels appear for allocating a sensor and adjusting a delay time.

If the flow rate monitoring option is activated, an error message will appear when no flow rate is detected at the allocated sensor after the **Delay** time has passed. The active relay is considered as defective and will be blocked until the error message has been acknowledged. The second relay will be activated instead. The twin pump function will pause until the error message has been acknowledged.

When the error message is acknowledged, the controller runs a test during which it will energise the relay and again monitor the flow rate.

## Solar / Opt. functions / Add new function.../ Twin pump

Adjustment channel	Description	Adjustment range / selection	Factory setting
Relay	Relay selection	system dependent	system dependent
Ref. relay	Reference relay selection	system dependent	system dependent
Runtime	Pump runtime	1 ... 48 h	6 h
Flow rate mon.	Flow rate monitoring option	Yes, No	No
Flow rate sen.	Flow rate sensor selection	Imp1, Gd1, Gd2	Imp1
Delay	Delay time	1 ... 10 min	5 min
Funct.	Activation / Deactivation	Activated, Deactivated	Deactivated


## Heat dump

Surplus heat diss.	
► Relay	R4
Tcol.	110 °C
Funct.	Activated




### Note:

The switch-on collector temperature is blocked against the emergency switch-off temperature by 10 K [20 °Ra].

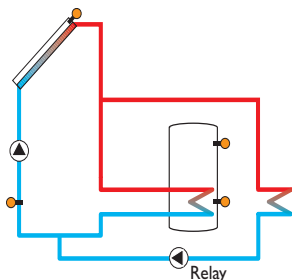

Variant pump

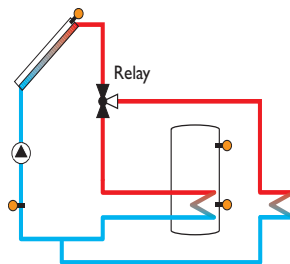

Variant valve

## Solar / Solar / Opt. functions / Add new function.../ Heat dump

Adjustment channel	Description	Adjustment range / selection	Factory setting
Relay	Relay selection	system dependent	system dependent
Variant	Variant (pump or valve logic)	Valve, pump	Valve
Tcol.	Switch-on collector temperature	40 ... 190 °C [104 ... 374 °F]	110 °C [230 °F]
Funct.	Activation / Deactivation	Activated, Deactivated	Deactivated

The **Heat dump function** can be used to direct excess heat generated by strong solar irradiation to an external heat exchanger (e. g. fan coil) in order to prevent the collectors from overheating.

Whether the heat dump is activated via an additional pump or a valve can be adjusted in the menu item **Variant**.

### Variant pump:

The allocated relay is energised with 100 %, if the collector temperature reaches the adjusted switch-on temperature. If the collector temperature falls by 5 K below the adjusted collector overtemperature, the relay will be switched off. In the variant pump, the heat dump function works independent from the solar loading.

### Variant valve:

The allocated relay is activated in parallel to the solar pump, if the collector temperature reaches the adjusted switch-on temperature. If the collector temperature falls by 5 K below the adjusted collector overtemperature, the relay will be switched off.

If one of the store temperatures exceeds its respective maximum temperature by more than 5 K while the heat dump function is active, the function is deactivated and an error message appears. If the temperature falls below this value by the hysteresis maximum store temperature (HysSt in the Solar / Basic settings / Store menu), the heat dump function is released again.

## Flow rate monitoring

Flow rate mon.	
Sensor	Imp.1
▶ Reference relay	R3
Store	1

## Solar / Opt. functions / Add new function.../ Flow rate mon.

Adjustment channel	Description	Adjustment range / selection	Factory setting
Sensor	Flow rate sensor selection	Imp1, Gd1, Gd2	Imp1
Ref. relay	Reference relay selection	system dependent	system dependent
Store	Sensor selection	system dependent	1
Time	Delay time	1 ... 300 s	30 s
Shutdown	Shutdown option	Yes, No	No
Funct.	Activation / Deactivation	Activated, Deactivated	Deactivated


The **Flow rate monitoring function** can be used to detect malfunctions that impede the flow rate and to block the corresponding store if necessary. This will prevent system damage, e. g. through a dry run of the pump.

In order to use the flow rate monitoring function, a Store and a **Reference relay** have to be selected.

When the allocated reference relay is active, the flow rate at the allocated Sensor is monitored. An error message will appear when no flow rate is detected at the allocated sensor after the **Delay time** has passed.

If the Shutdown option has been activated for the flow rate monitoring function, the store being loaded is blocked for any further loading until the error message has been acknowledged. The next store free for loading will be loaded instead. When the error message is acknowledged, the monitoring function becomes active again.

## Pressure monitoring

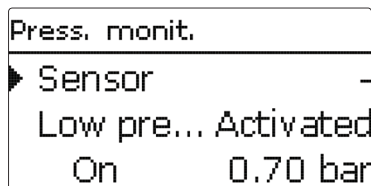

### Note:

The pressure monitoring function will only be available when an RPD type Grundfos Direct Sensor™ is connected.

## Solar / Opt. functions / Add new function.../ Pressure monitoring

Adjustment channel	Description	Adjustment range / selection	Factory setting
Press. monit.	Pressure monitoring option	Yes, No	No
Overpressure	Overpressure monitoring option	Activated, Deactivated	Activated
On	Switch-on threshold	0.30 ... 10.00 bar	5.50 bar
Off	Switch-off threshold	0.20 ... 9.90 bar	5.00 bar
Shutdown	Shutdown option	Yes, No	No
Low pressure	Low pressure monitoring option	Activated, Deactivated	Activated
On	Switch-on threshold	0.00 ... 9.70 bar	0.70 bar
Off	Switch-off threshold	0.10 ... 9.80 bar	1.00 bar
Shutdown	Shutdown option	Yes, No	No
Funct.	Activation / Deactivation	Activated, Deactivated	Deactivated

The **Pressure monitoring** function can be used to detect possible overpressure or low pressure conditions inside the system, and if necessary to shut down the affected system components in order to avoid system damage.

### Overpressure

If the system pressure exceeds the adjustable value **On**, an error message will appear.

If the **Shutdown** option has been activated for the overpressure monitoring function, the solar system will be shut down as well in the case of a fault condition.

When the pressure reaches or falls below the adjustable value **Off**, the system is switched on again.



### Note:

For the **Overpressure** monitoring function, **On** has to be adjusted at least 0,1 bar higher than **Off**. The corresponding adjustment ranges will adapt to that.

### Low pressure

If the system pressure falls below the adjustable value **On**, an error message will appear.


If the **Shutdown** option has been activated for the low pressure monitoring function, the solar system will be shut down as well in the case of a fault condition.

When the pressure reaches or exceeds the adjustable value **Off**, the system is switched on again.




### Note:

For the **Low pressure monitoring** function, **Off** has to be adjusted at least 0,1 bar higher than **On**. The corresponding adjustment ranges will adapt to that.

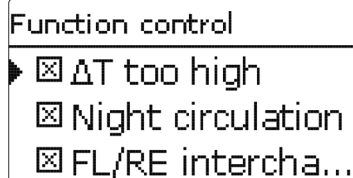

#### ΔT-monitoring

This function can be used to monitor the temperature difference between the collector and the store. The warning message **ΔT too high** will appear when solar loading has been active at a temperature difference of more than 50 K for a period of 20 minutes or more. The system will not be shut down, but should be checked.

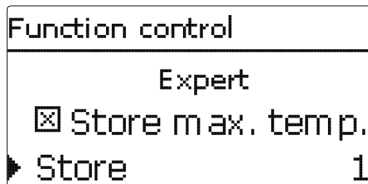

#### Solar/Function control

Adjustment channel	Description	Adjustment range / selection	Factory setting
ΔT too high	Option ΔT monitoring option	Yes, No	Yes
Night circulation	Night circulation monitoring option	Yes, No	Yes
FL/RE interchanged	FL/RE interchange monitoring option	Yes, No	Yes
St. max. temp.	Maximum store temperature monitoring option	Yes, No	No
Store	Store selection	System-dependent	System-dependent

Possible causes are:

- pump power too weak
- blocked system components
- faulty flowthrough in the collector field
- air inside the pipework
- defective valve and/or pump

#### Night circulation

This function can be used to detect thermal circulation inside the solar circuit that leads to an unwanted cooling of the store. A warning message will appear when one of the following conditions has been detected for at least 1 minute during the period between 11 pm and 5 am:

- collector temperature exceeds 40 °C
- the temperature difference exceeds ΔTon

The delay time of 1 minute ensures that the message is not triggered by short-term fault conditions.

Possible causes are:

- defective non-return valves
- defective valve
- wrongly adjusted time

#### Flow and return pipe interchanged

This function can be used to detect an interchange of the flow and return pipe or a badly placed collector sensor. For this purpose, the collector temperature is monitored for plausibility during the switch-on phases of the solar pump. The message FL/RE interchanged will appear, when the plausibility criteria have not been met 5 times in a row.

The following option is only visible when the expert user code has been entered (QV).

#### Maximum store temperature

This function can be used to detect the exceedance of the adjusted maximum store temperature. The controller compares the current store temperature to the adjusted maximum store temperature and thus monitors the store loading circuits.

The maximum store temperature is considered exceeded when the temperature measured at the store sensor exceeds the adjusted maximum store temperature by at least 5 K. The monitoring becomes active again as soon as the store temperature falls below the adjusted maximum store temperature.

In the Store channel, the store or stores to be monitored can be selected.


A possible cause for an unwanted exceedance of the maximum store temperature is a defective valve.

## 8.4 Solar expert menu

Expert

☒ Flow sensor  
 Sensor

☐ Return sensor

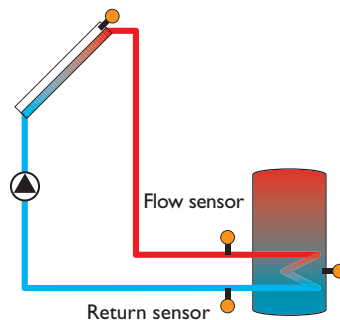

Example of flow- and return sensor positions

### Solar / Expert

Adjustment channel	Description	Adjustment range / selection	Factory setting
Flow sensor	Flow sensor option	Yes, No	No
Sensor	Flow sensor selection	system dependent	system dependent
Return sensor	Return sensor option	Yes, No	No
Sensor	Return sensor selection	system dependent	system dependent

The expert menu is only available when the expert user code has been entered.

In the expert menu, a flow and a return sensor can be selected and allocated. The activated sensors are used to detect the switch-off conditions.



#### Note:

Because of the special hydraulics, this function will not work properly in systems with 2 collector fields.

## 9 Arrangement

Arrangement
▶ Opt. functions back

In this menu, all adjustments for the non-solar part of the arrangement can be made.

A range of optional functions can be selected and adjusted.

### 9.1 Optional functions

Arr. / Opt. functions
▶ Parallel relay
Mixer
Boiler loading

In this menu, additional functions can be selected and adjusted for the arrangement.

By selecting **Add new function...**, different pre-programmed functions can be selected. The optional functions are available as long as free relays are available.

Parallel relay	
▶ Relay	R5
Ref. relay	R1
<input type="checkbox"/> Overrun	

When a function is selected, a submenu opens in which all adjustments required can be made.

With this submenu, a relay and, if necessary, certain system components can be allocated to the function.

Relay selec.
▶ <input type="checkbox"/> Controller
R4
R5

The menu item **Relay selec.** is available in all optional functions. Therefore, it will not be explained in the individual function descriptions.

With this menu item, a relay can be allocated to the function. All free relays are available for selection.

In the submenu **Controller**, all free relays of the controller are displayed. If external modules are connected and registered, their relays will be displayed in corresponding submenus.

Arr. / Opt. functions
▶ Parallel relay
Add new function
back

When a function has been selected and adjusted, it will appear in the **Opt. functions** above the menu item **Add new function...**

This allows an easy overview of functions already activated.

An overview about which sensor has been allocated to which component and which relay has been allocated to which function is given in the **Status/Service** menu.

Parallel relay	
Inverted	No
Funct.	Activated
▶ Delete function	

At the end of each optional function submenu, the menu items **Funct.** and **Delete function** are available.

Funct.
▶ <input checked="" type="radio"/> Activated
<input type="radio"/> Deactivated

With the menu item **Funct.**, an optional function already selected can be temporarily deactivated or re-activated respectively. All adjustments remain stored, the allocated relays remain occupied and cannot be allocated to another function.

Parallel relay	
Reset?	No

If the menu item **Delete function** is confirmed by pressing button (5), a security enquiry appears. The setting can be changed between **Yes** and **No** by pressing buttons (2) and (4). If **Yes** has been selected and confirmed by pressing button (5), the function is deleted and available under **Add new function...** again. The corresponding relays are available again.



## Parallel relay

Parallel relay

▶ Relay

R5

Ref. relay

R1

☐ Overrun



### Note:

If a relay is in the manual mode, the selected parallel relay will not be energised.

The **Parallel relay** function can be used to operate an allocated parallel relay alongside a selected reference relay. With this function, e.g. a valve can be controlled in parallel to the pump via a separate relay.

If the **Overrun** option is activated, the parallel relay remains switched on for the adjusted duration time after the reference relay has been switched off.

If the **Delay** option is activated, the parallel relay will be energised after the adjusted duration has expired. If the reference relay is switched off again during the delay time, the parallel relay will not be switched on at all.

If the **Inverted** option is activated, the parallel relay switches on when the reference relay switches off and vice versa.

## Arrangement / Opt. functions / Add new function.../ Parallel relay

Adjustment channel	Description	Adjustment range / selection	Factory setting
Relay	Relay selection	system dependent	system dependent
Ref. relay	Reference relay selection	system dependent	system dependent
Overrun	Overrun option	Yes, No	No
Duration	Overrun time	1 ... 30 min	1 min
Delay	Delay option	Yes, No	No
Duration	Delay time	1 ... 30 min	1 min
Inverted	Inverted switching option	Yes, No	No
Funct.	Activation / Deactivation	Activated, Deactivated	Deactivated

## Mixer

Mixer

▶ Relay closed

R2

Relay open

R4

Sensor

S3

The mixer function can be used to adjust the actual flow temperature to the desired mixer target temperature **TMixer**. The mixer is opened or closed in pulses depending on this deviation. The pulses are determined by the adjustable **Interval**. The pause is determined by the difference between the actual value and the set value.

## Arrangement / Opt. functions / Add new function.../ Mixer

Adjustment channel	Description	Adjustment range / selection	Factory setting
Relay closed	Relay selection mixer closed	system dependent	system dependent
Relay open	Relay selection mixer open	system dependent	system dependent
Sensor	Sensor selection	system dependent	system dependent
TMixer	Mixer target temperature	0 ... 130 °C [32 ... 266 °F]	60 °C [140 °F]
Interval	Mixer interval	1 ... 20 s	4 s
Funct.	Activation / Deactivation	Activated, Deactivated	Deactivated

## Boiler loading

Boiler loading	
► Relay	R5
Sensor top	S4
Sensor base	S5

The **Boiler loading** function can be used to load a store zone between 2 sensors. For the monitoring of switch-on and switch-off conditions, 2 sensors are used. The switch-on and switch-off temperatures **TBoiler on** and **TBoiler off** are used as reference parameters.

If the measured temperatures at both allocated sensors fall below the adjusted switching threshold **TBoiler on**, the relay is energised. It is switched off again when the temperature at both sensors has exceeded **TBoiler off**.

If one of the two sensors is defective, store loading is suppressed or switched off.

Timer: Monday	
00:00 03:00 06:00 09:00	
12:00 15:00 18:00 21:00	

When the **Timer** option is activated, a timer is indicated in which time frames for the function can be adjusted.



### Note:

For information on timer adjustment see page 11

## Arrangement / Opt. functions / Add new function.../ Boiler loading

Adjustment channel	Description	Adjustment range / selection	Factory setting
Relay	Relay selection	system dependent	system dependent
Sensor top	Top sensor selection	system dependent	system dependent
Sensor base	Base sensor selection	system dependent	system dependent
TBoiler on	Boiler switch-on temperature	0 ... 94 °C [32 ... 202 °F]	45 °C [114 °F]
TBoiler off	Boiler switch-off temperature	1 ... 95 °C [34 ... 204 °F]	60 °C [140 °F]
Timer	Timer option	Yes, No	No
Timer	Timer	-	-
Days of the week	Day selection	All days, Monday ... Sunday, Continue	-
Timer	Time frame adjustment	00:00 ... 23:45	-
Func.	Activation / Deactivation	Activated, Deactivated	Deactivated

## Error relay

Error relay	
► Relay	R2
Func.	Activated
Delete function	

The error relay function can be used to operate a relay in the case of an error. Thus, e. g. a signalling device can be connected to signal errors.


If the error relay function is activated, the allocated relay will be energised when a sensor fault occurs. If the flow rate monitoring function is activated, the error relay will additionally energised in the case of a flow rate error.

## Arrangement / Opt. functions / Add new function.../ Error relay

Adjustment channel	Description	Adjustment range / selection	Factory setting
Relay	Relay selection	system dependent	system dependent
Func.	Activation / Deactivation	Activated, Deactivated	Deactivated

## Heat exchange

Heat exchange	
Relay	R2
Sen. Source	S3
Sen. Sink	S4

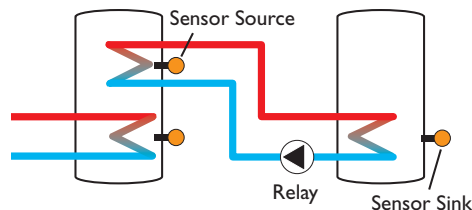

The **Heat exchange function** can be used for transferring heat from a heat source to a heat sink.

The allocated relay is energised when all switch-on conditions are fulfilled:

- the temperature difference between the allocated sensors has exceeded the switch-on temperature difference
- the temperature at the heat source sensor has exceeded the minimum temperature
- the temperature at the heat sink sensor has fallen below the maximum temperature


If  $\Delta T_{set}$  is exceeded, pump speed control will come into effect. For every deviation of 2 K [4 °Ra], the pump speed will be adjusted by 10 %.

## Arrangement / Opt. functions / Add new function.../ Heat exchange

Adjustment channel	Description	Adjustment range / selection	Factory setting
Relay	Relay selection	system dependent	system dependent
Sen. Source	Heat source sensor selection	system dependent	system dependent
Sen. Sink	Heat sink sensor selection	system dependent	system dependent
$\Delta T_{on}$	Switch-on temperature difference	1.0 ... 30.0 K [2.0 ... 60.0 °Ra]	6.0 K [12.0°Ra]
$\Delta T_{off}$	Switch-off temperature difference	0.5 ... 29.5 K [1.0 ... 59.0 °Ra]	4.0 K [8.0°Ra]
$\Delta T_{set}$	Set temperature difference	1.5 ... 40.0 K [3.0 ... 80.0 °Ra]	10.0 K [20.0°Ra]
Min. speed	Minimum speed	(20) 30 ... 100 %	30 %
Tmax	Maximum temperature of the store to be loaded	10 ... 95 °C [50 ... 204 °F]	60 °C [140 °F]
Tmin	Minimum temperature of the store to be loaded	10 ... 95 °C [50 ... 204 °F]	10 °C [50 °F]
Funct.	Activation / Deactivation	Activated, Deactivated	Deactivated

### Solid fuel boiler

Solid fuel boiler	
Relay	R5
Sen. Boiler	S7
Sen. Store	S9

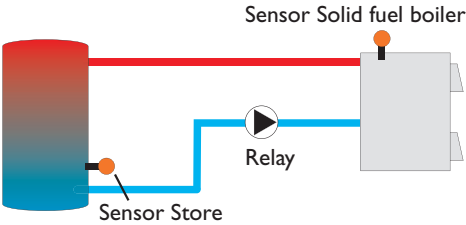

The **Solid fuel boiler function** can be used for transferring heat from a solid fuel boiler to a store. The allocated relay is energised when all switch-on conditions are fulfilled:

- the temperature difference between the allocated sensors has exceeded the switch-on temperature difference
- the temperature at the solid fuel boiler sensor has exceeded the minimum temperature
- the temperature at the store sensor has fallen below the maximum temperature

If  $\Delta T_{set}$  is exceeded, pump speed control will come into effect. For every deviation of 2 K [4 °Ra], the pump speed will be adjusted by 10 %.

### Arrangement / Opt. functions / Add new function.../ Solid fuel boiler

Adjustment channel	Description	Adjustment range / selection	Factory setting
Relay	Relay selection	system dependent	system dependent
Sen. Boiler	Solid fuel boiler sensor selection	system dependent	system dependent
Sen. Store	Store sensor selection	system dependent	system dependent
$\Delta T_{on}$	Switch-on temperature difference	1.0 ... 30.0 K [2.0 ... 60.0 °Ra]	6.0 K [12.0°Ra]
$\Delta T_{off}$	Switch-off temperature difference	0.5 ... 29.5 K [1.0 ... 59.0 °Ra]	4.0 K [8.0°Ra]
$\Delta T_{set}$	Set temperature difference	1.5 ... 40.0 K [3.0 ... 80.0 °Ra]	10.0 K [20.0°Ra]
Min. speed	Minimum speed	(20) 30 ... 100 %	30 %
Tmax St.	Maximum temperature	10 ... 95 °C [50 ... 204 °F]	60 °C [140 °F]
Tmin boiler	Minimum temperature	10 ... 95 °C [50 ... 204 °F]	60 °C [140 °F]
Funct.	Activation / Deactivation	Activated, Deactivated	Deactivated

## Circulation

Circulation	
Relay	R2
Type	Thermal
Sensor	S3

The **Circulation** function can be used for controlling a circulation pump.

For the control logic, 5 different variants are available:

- Thermal
- Timer
- Therm. + Timer
- Demand
- Demand + Timer

If one of the variants is selected, the corresponding adjustment channels will appear.

## Thermal


The temperature at the allocated sensor is monitored. The allocated relay switches on when the adjusted switch-on temperature is exceeded. If the temperature falls below the switch-off temperature, the relay switches off.

## Timer

The relay is switched on during the adjusted time frames, outside of them it switches off. For information on how to adjust the timer, see below.

### Therm. + Timer

The relay operates when the switch-on conditions of both above mentioned variants are fulfilled.

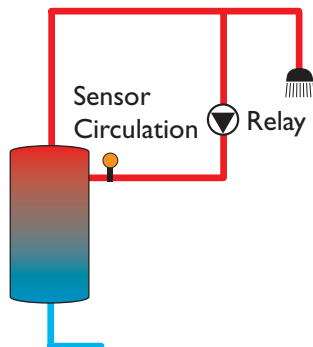

## Demand

The allocated FS08 flow switch is monitored for continuity (circuit continuity is achieved when fluid passes through the flow switch). If circuit continuity is detected at the flow switch, the relay switches on for the adjusted runtime. After the runtime has ended, the relay is switched off. During the adjusted break time, the relay remains switched off even if continuity is detected at the flow switch.



**Note:**

If the flow switch is connected to the input S1...S12, continuity must be detected for at least 5 s for the controller to an impuls input at least 1 s.

### Demand + Timer

The relay operates when the switch-on conditions of both above mentioned variants are fulfilled.

[illegible]

Days of the week

- ▶ All days
- ☐ Monday
- ☐ Tuesday

When the **Timer**, **Therm. + Timer** or **Demand + Timer** variant is activated, a timer is indicated in which time frames for the function can be adjusted.



**Note:**


For information on timer adjustment see  
page 11

**Arrangement / Opt. functions / Add new function.../ Circulation**

Adjustment channel	Description	Adjustment range / selection	Factory setting
Relay	Relay selection	system dependent	system dependent
Type	Circulation Type	Demand, Thermal, Timer, Therm.+Timer, Demand+Timer	Thermal
Sensor	Circulation sensor selection	system dependent	system dependent
Ton	Switch-on temperature	10 ... 59 °C [50 ... 138 °F]	40 °C [104 °F]
Toff	Switch-off temperature	11 ... 60 °C [52 ... 140 °F]	45 °C [114 °F]
Timer	Timer	-	-
Days of the week	Day selection	All days, Monday ... Sunday, Continue	-
Timer	Time frame adjustment	00:00 ... 23:45	-
Sensor	FS08 sensor input selection	system dependent	system dependent
Delay	Demand delay time	0 ... 2 s	1 s
Runtime	Runtime	01:00 ... 15:00 min	03:00 min
Break time	Break time	10 ... 60 min	30 min
Funct.	Activation / Deactivation	Activated, Deactivated	Deactivated

## Return preheating

Return preheat.	
Relay	R4
Sen. Return	S6
Sen. HSource	S9

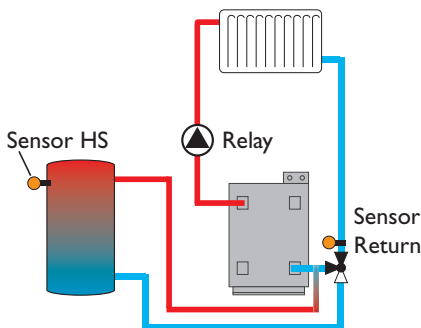

The **Return preheating** function can be used for transferring heat from a heat source to the heating circuit return.

The allocated relay is energised when both switch-on conditions are fulfilled:

- the temperature difference between the allocated sensors has exceeded the switch-on temperature difference
- the temperature at the outdoor temperature sensor has fallen below the adjusted outdoor temperature


With the summer switch-off option, the return preheating can be suppressed outside the heating period. If the heating circuit concerned is controlled by the controller, the adjustments automatically adapt to the heating circuit.

## Arrangement / Opt. functions / Add new function.../ Ret. preheat.

Adjustment channel	Description	Adjustment range / selection	Factory setting
Relay	Relay selection	system dependent	system dependent
Sen. Return	Return sensor selection	system dependent	system dependent
Sen. HS	Heat source sensor selection	system dependent	system dependent
$\Delta T_{on}$	Switch-on temperature difference	2.0 ... 30.0 K [4.0 ... 60.0 °Ra]	6.0 K [12.0 °Ra]
$\Delta T_{off}$	Switch-off temperature difference	1.0 ... 29.0 K [2.0 ... 58.0 °Ra]	4.0 K [8.0 °Ra]
Summer off	Summer switch-off option	Yes, No	No
Sensor	Outdoor sensor selection	system dependent	system dependent*
Toff	Switch-off temperature	10 ... 60 °C [50 ... 140 °F]	20 °C [68 °F]
Funct.	Activation / Deactivation	Activated, Deactivated	Deactivated

\*When a heating circuit has been activated, this adjustment is determined by the corresponding parameter in the heating circuit menu.

## Function block

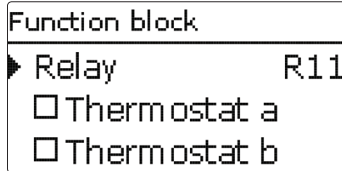

In addition to the pre-defined optional functions, function blocks consisting of thermostat functions, timer and differential functions are available. With the help of these function blocks, further components, resp. functions can be controlled.

To each function block, sensors and free relays can be allocated. Sensors already in use can be allocated again without impeding their control functions.

Within a function block the functions are interconnected (AND gate). This means that the conditions of all the activated functions have to be fulfilled (e. g. thermostat and timer) for switching the allocated relay. As soon as one condition is not fulfilled, the relay is switched off.

### Thermostat function

The relay allocated to the function block is switched on, when the adjusted switch-on temperature ( $Th(x)$  on) is reached. It is switched off when the adjusted switch-off temperature ( $Th(x)$  off) is reached. The switching conditions of all other activated functions of the function block have to be fulfilled as well.

Allocate the reference sensor in the **Sensor** channel. Adjust the maximum temperature limitation with  $Th(x)_{off} > Th(x)_{on}$  and the minimum temperature limitation with  $Th(x)_{on} > Th(x)_{off}$ . The temperatures cannot be set to an identical value.

### $\Delta T$ function


The relay allocated to the function block is switched on as soon as the adjusted switch-on temperature difference ( $\Delta Th(x)_{on}$ ) is reached. It is switched off as soon as the adjusted switch-off temperature difference ( $\Delta Th(x)_{off}$ ) is reached. The switching conditions of all other activated functions of the function block have to be fulfilled as well.

The  $\Delta T$  function is equipped with a speed control function. A set temperature difference and a minimum speed can be adjusted. The non-adjustable rise value is 2 K.



#### Note:

For information on timer adjustment see page 11.

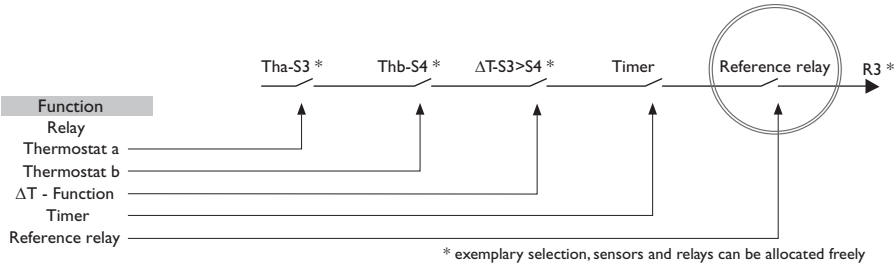

#### Note:

If more than one function block has been activated, relays of numerically higher function blocks may not be used as reference relays.

### Reference relay

Up to 5 reference relays can be selected.


Whether the reference relays are to be switched in series (AND) or in parallel (OR) can be adjusted in the **Mode** channel.

#### OR mode

If at least one of the reference relays is active, the switch-on condition for the function block is considered fulfilled. The switching conditions of all other activated functions of the function block have to be fulfilled as well.

#### AND mode

If all reference relays are active, the switch-on condition for the function block is considered fulfilled. The switching conditions of all other activated functions of the function block have to be fulfilled as well.

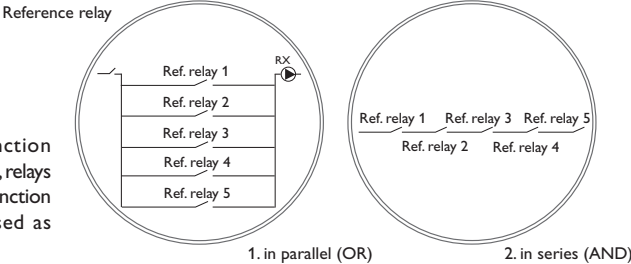



## Arrangement/Opt. functions/Add new function/Function block

Adjustment channel	Description	Adjustment range/selection	Factory setting
Relay	Relay	system dependent	system dependent
Thermostat a	Thermostat a	Yes, No	No
Th-a on	Switch-on temperature Thermostat a	-40 ... +250 °C	+40 °C
Th-a off	Switch-off temperature Thermostat a	-40 ... +250 °C	+45 °C
Sensor	Sensor thermostat a	system dependent	system dependent
Thermostat b	Thermostat b	Yes, No	No
Th-b on	Switch-on temperature Thermostat b	-40 ... +250 °C	+40 °C
Th-b off	Switch-off temperature Thermostat b	-40 ... +250 °C	+45 °C
Sensor	Sensor thermostat b	system dependent	system dependent
ΔT function	Differential function	Yes, No	No
ΔTon	Switch-on temperature difference	1.0 ... 50.0 K	5.0 K
ΔToff	Switch-off temperature difference	0.5 ... 49.5 K	3.0 K
ΔTset	Set temperature difference	3 ... 100 K	10 K
Min speed	Minimum speed	30 ... 100 %	30 %
Sen. Source	Heat source sensor	system dependent	system dependent
Sen. Sink	Heat sink sensor	system dependent	system dependent
Timer	Timer	-	No
Days of the week	Day selection	All days, Monday ... Sunday, Continue	-
Timer	Time frame adjustment	00:00 ... 23:45	-
Ref. relay	Reference relay	Yes, No	No
Mode	Reference relay mode	OR, AND	OR
Relay	Reference relay 1	all relays*	-
Relay	Reference relay 2	all relays*	-
Relay	Reference relay 3	all relays*	-
Relay	Reference relay 4	all relays*	-
Relay	Reference relay 5	all relays*	-
Funct.	Activation/Deactivation	Activated, Deactivated	Activated

\* Relays that have been selected as parallel relays (in the optional functions Solar/Parallel relay and Arrangement/Parallel relay) will not work as reference relays.

## Irradiation switch

Irrad. switch		
▶ Relay		R3
Irrad.	200 W/m <sup>2</sup>	
Duration	2 min	

The **Irrad. switch** function can be used for operating a relay depending on the measured irradiation value.

The allocated relay is switched on if the adjusted irradiation value remains exceeded for the adjusted duration. If the irradiation falls below the adjusted value for the adjusted duration, the relay is switched off.

If the **Inverted** option is activated, the relay operates vice versa.

## Arrangement / Opt. functions / Add new function.../ Irradiation switch

Adjustment channel	Description	Adjustment range / selection	Factory setting
Relay	Relay selection	system dependent	system dependent
Irrad.	Switch-on irradiation	50 ... 1000 W/m <sup>2</sup>	200 W/m <sup>2</sup>
Duration	Switch-on duration	0 ... 30 min	2 min
Inverted	Inverted switching option	Yes, No	No
Funct.	Activation / Deactivation	Activated, Deactivated	Deactivated


## 10 Heating

Heating	
▶ Demands	
HCs	
Opt. functions	

In this menu, all adjustments for the heating part of the arrangement or for the heating circuits respectively can be made.

Demands can be activated, heating circuits can be parameterised and optional functions can be selected and adjusted.

## 10.1 Demands

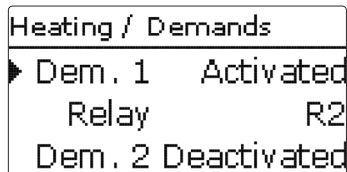


### Heating / Demands

Adjustment channel	Description	Adjustment range / selection	Factory setting
Demand 1 (2)	Demand 1 (2)	Activated, Deactivated	Deactivated
Relay	Relay selection	system dependent	system dependent

## 10.2 Heating circuits

(with EM Extension Modules only)

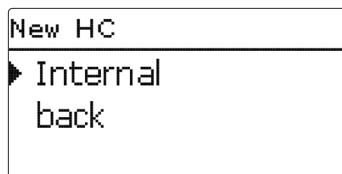

The controller is able to control 2 external, weather-compensated heating circuits by means of extension modules.

If one or more extension modules are connected, they have to be registered with the controller. Only registered modules are available in the heating circuit selection.

In the menu appearing when **New heating circuit** is selected, it is possible to choose between registered modules.

Extension modules can be registered in the In-/Outputs / Modules menu (see page 71).

If an internal or external heating circuit has been selected, a new menu opens. In this menu, all sensors and relays required for the heating circuit can be allocated, and all adjustments can be made.

The controller calculates the set flow temperature for each heating circuit by means of the outdoor temperature and the selected heating curve. If the measured flow temperature deviates from the set flow temperature, the mixer is activated in order to adjust the flow temperature correspondingly.

If the outdoor temperature falls below the point where the calculated set flow temperature would exceed the maximum flow temperature, the maximum flow temperature is treated as the set temperature for as long as the condition remains.

If the outdoor temperature sensor is defective, an error message is indicated. For the duration of this condition, the maximum flow temperature -5 K [-10°Ra] is assumed as set flow temperature.

In this menu, up to 2 heating demands can be activated and adjusted.


**Activated demands will be available for selection in the relay allocation channels of the corresponding optional functions. This way, several optional functions can demand the same heat source.**

If, for example the potential-free relay R5 is allocated to **Demand 1**, the selection **AH-Dem.1** will then become available in addition to the free relays in the adjustment channels **Demand** of the optional functions for the heating part of the arrangement (see page 63). This way, e.g. the DHW heating function can demand the same boiler for afterheating as the thermal disinfection function.

With the timer, the day / night operation can be adjusted. During day phases, the set flow temperature is increased by the adjusted day correction value, during night phases it is decreased by the night correction value (night setback).

## Summer mode

The Mode channel adjustment determines how the heating circuit is set to summer mode:

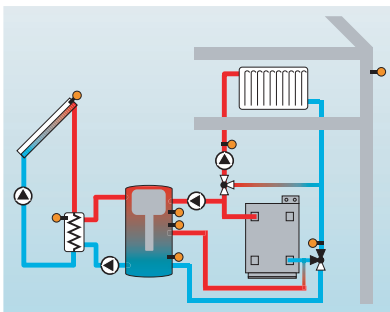


**Summer off:** The summer mode becomes active when the outdoor temperature exceeds the adjusted summer temperature TSummer.

**Ext. switch:** A switch is connected to a selected sensor input. If the switch is operated, the heating circuit is set to summer mode regardless of the outdoor temperature.

**Both:** As long as the switch is not operated, summer mode control works as described for Summer off. Summer mode is activated regardless of the outdoor temperature when the switch is operated.

### Summer temperature

If **Summer off** or **Both** has been selected in the **Mode** channel, the summer temperature **TSummer** can be adjusted. If the outdoor temperature exceeds the value adjusted in TSummer, the heating circuit pump is switched off.

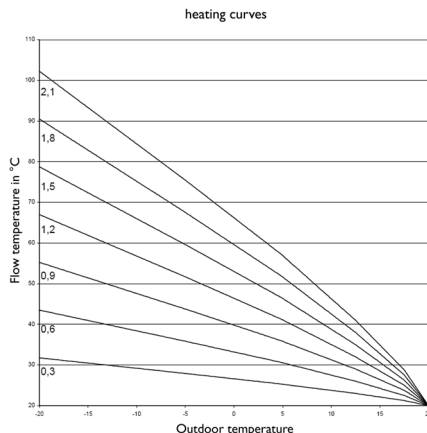

For the summer temperature, a daytime time frame can be adjusted with the channels **Daytime on** and **Daytime off**. Outside this time frame, the adjustable temperature **TNight** replaces **TSummer**.

With the **Room thermostat** option, up to 5 room thermostats can be integrated into the control logic. To each room thermostat, a sensor input can be allocated. The temperature at the allocated sensor is monitored. If the measured temperature exceeds the adjusted **Room temperature** value at all activated room thermostats, the heating circuit pump is deactivated and the mixer remains in its current position.

Common room thermostats with potential-free outputs can be used alternatively. In this case, **Switch** must be adjusted in the **Type** channel. Before adjusting the type, the corresponding input must also be set to **Switch** in the Inputs / Outputs menu (see main controller manual). Only inputs set to **Switch** will be displayed in the **Sen. RTH** channel as possible inputs for a switch type room thermostat.

If the **Timer RTH** option is activated, time frames can be set for the room thermostats (for information on how to adjust the timer see below). During these time frames, the adjusted room temperature is decreased by the **Correction** value.

To each room thermostat, an additional relay can be allocated. That relay will operate when the temperature at the allocated sensor falls below the adjusted room temperature. This way, the room in question can be excluded from the heating circuit via a valve as long as the desired room temperature is reached.

In the channel **RTH**, the room thermostat can be temporarily deactivated or re-activated respectively. All adjustments remain stored.

When the **Timer** option is activated, a timer is indicated in which time frames for the function can be adjusted.



### Note:

For information on timer adjustment see page 11

## Heating / Heating circuits / New heating circuit / Internal

Adjustment channel	Description	Adjustment range / selection	Factory setting
HC pump	Heating circuit pump	system dependent	system dependent
Mixer open	Relay selection mixer open	system dependent	system dependent
Mixer closed	Relay selection mixer closed	system dependent	system dependent
Flow sensor	Flow sensor selection	system dependent	system dependent
Sen. Outd.	Outdoor sensor selection	system dependent	system dependent
Heating curve	Heating curve	0.3 ... 3.0	1.0
Day correction	Day correction	-5 ... +45 K [-10 ... +90 °Ra]	0 K [0 °Ra]
Tflowmax	Maximum flow temperature	10 ... 100 °C [50 ... 212 °F]	50 °C [122 °F]
Mode	Operation mode	Summer off, Ext. switch, both	Summer off
Tsummer	Summer temperature day	0 ... 40 °C [0 ... 70 °F]	20 °C [68 °F]
Daytime on	Daytime on	00:00 ... 23:45	00:00
Daytime off	Daytime off	00:00 ... 23:45	00:00
Tnight	Summer temperature night	0 ... 40 °C [0 ... 70 °F]	14 °C [57 °F]
Ext. switch	External switch sensor input selection	system dependent	system dependent
Remote control	Remote control option	Yes, No	No
Sen. Rem.control	Remote control sensor input selection	system dependent	system dependent
Timer	Timer option	Yes, No	No
Mode	Timer mode	Day / Night, Day / Off	Day / Night
Night corr.	Night correction	-20 ... +30 K [-40 ... +60 °Ra]	-5 K [-10 °Ra]
Timer	Timer	-	-
Days of the week	Day selection	All days, Monday ... Sunday, Continue	-
Timer	Time frame adjustment	00:00 ... 23:45	-
Room therm. 1 ... 5	Room thermostat option (1 ... 5)	Yes, No	No
Type	Room thermostat type selection	Sensor, Switch	Sensor
Sen.RTH	RTH sensor input selection	system dependent	system dependent
Troom	Room temperature	10 ... 30 °C [50 ... 86 °F]	18 °C [64 °F]
Timer	RTH timer	Yes, No, Inactive	No

Adjustment channel	Description	Adjustment range / selection	Factory setting
Days of the week	Day selection	All days, Monday ... Sunday, Continue	-
Timer	Time frame adjustment	00:00 ... 23:45	-
Correction	Correction	1 ... 20 K [2 ... 40 °Ra]	5 K [10 °Ra]
Relay	RTH relay selection	system dependent	system dependent
RTH	Room thermostat	Activated, Deactivated	Deactivated
Afterheating	Afterheating option	Yes, No	No
Mode	Afterheating mode	Therm., Boiler	Therm.
Relay	Afterheating relay selection	system dependent	system dependent
Sensor 1	Afterheating sensor 1 selection	system dependent	system dependent
Sensor 2	Afterheating sensor 2 selection	system dependent	system dependent
Loading pump	Loading pump option	Yes, No	No
Relay	Loading pump relay selection	system dependent	system dependent
Overrun time	Loading pump overrun time	0 ... 300 s	60 s
Activated	Activation / Deactivation	Activated, Deactivated	Deactivated
ΔTon	Switch-on temperature difference	-15.0 ... +44.5 K [-30.0 ... +89.0 °Ra]	+5.0 K [+10.0 °Ra]
ΔToff	Switch-off temperature difference	-14.5 ... +45.0 K [-19.0 ... +90.0 °Ra]	+15.0 K [+30.0 °Ra]
Function	Function activated / deactivated	Activated, Deactivated	Deactivated
Interval	Mixer interval	1 ... 20 s	4 s
Chimney sweeper	Chimney sweeper function	Yes, No	No
Frost protection	Antifreeze option	Yes, No	Yes
Sensor	Antifreeze option sensor	Flow, Outdoor	Flow
Antifr. temp.	Antifreeze temperature	-20 ... +10 °C [-68 ... +50 °F]	+4 °C [+39 °F]
Flow set	Set flow temperature	10 ... 50 °C [-50 ... +122 °F]	20 °C [68 °F]
DHW priority	DHW priority option	Yes, No	No
Funct.	Activation / Deactivation	Activated, Deactivated	Deactivated

## Chimney sweeper function

The chimney sweeper function can be used for enabling a quick access to measurement conditions without menu operation for the chimney sweeper.

If the chimney sweeper function is activated, the chimney sweeper mode can be accessed by pressing button **6** for 5 seconds.

In the chimney sweeper mode, the heating circuit mixer opens, the heating circuit pump and the afterheating contact are activated. While the chimney sweeper mode is active, the directional pad is illuminated. Additionally, **Chimney sweeper** and a countdown of 30 minutes are indicated on the display.

When the countdown has elapsed, the chimney sweeper mode is automatically deactivated. If, during the countdown, button **6** is again pressed for more than 10 seconds, the countdown starts again.


In order to abort the countdown and thus deactivate the chimney sweeper mode, briefly press button **6**.

## Antifreeze option

The antifreeze option of the heating circuit can be used to temporarily activate an inactive heating circuit during sudden temperature drops in order to protect it from frost damage.


When the antifreeze option is activated, the temperature at the allocated sensor is monitored. If the temperature falls below the adjusted **antifreeze temperature**, the heating circuit is activated for the non-adjustable runtime of 30 min. Antifreeze operation has its own set flow temperature which can be changed in the **Flow set** channel.

### 10.3 Optional functions

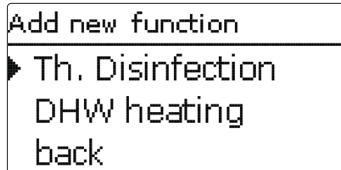


In this menu, additional functions can be selected and adjusted for the heating part of the arrangement.

By selecting **Add new function...**, different pre-programmed functions can be selected. The optional functions are available as long as free relays are available.

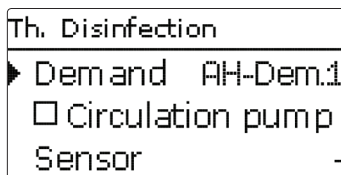

When a function is selected, a submenu opens in which all adjustments required can be made.


With this submenu, a relay and, if necessary, certain system components can be allocated to the function.

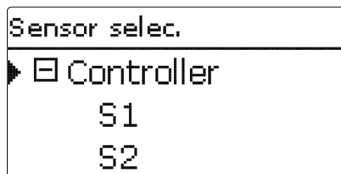

The menu item **Demand** is available in all optional heating functions. Therefore, it will not be explained in the individual function descriptions.

With this menu item, an afterheating demand relay can be allocated to the function. All free relays are available for selection.


In the submenu **Controller**, all free relays of the controller are displayed. If external modules are connected and registered, their relays will be displayed in corresponding submenus.

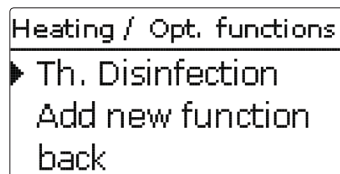


When a function has been selected and adjusted, it will appear in the **Opt. functions** above the menu item **Add new function...**

This allows an easy overview of functions already activated.


An overview about which sensor has been allocated to which component and which relay has been allocated to which function is given in the **Status/Service** menu.

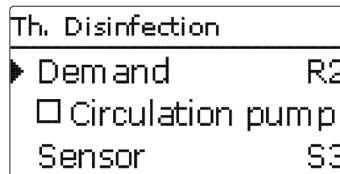

At the end of each optional function submenu, the menu items **Function** and **Delete function** are available.

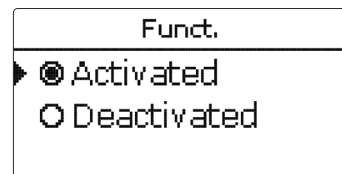

With the menu item **Function**, an optional function already selected can be temporarily deactivated or re-activated respectively. All adjustments remain stored, the allocated relays remain occupied and cannot be allocated to another function.

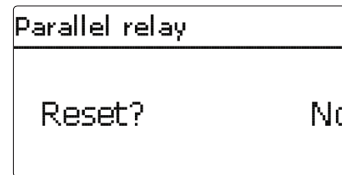

If the menu item **Delete function** is confirmed by pressing button **5**, a security enquiry appears. The setting can be changed between **Yes** and **No** by pressing buttons **2** and **4**. If **Yes** has been selected and confirmed by pressing button **5**, the function is deleted and available under **Add new function...** again. The corresponding relays are available again.

## Thermal disinfection

```

Th. Disinfection
▶ Demand AH-Dem.1
□ Circulation pump
Sensor
    
```

This function helps to contain the spread of Legionella in DHW stores by systematically activating the afterheating.

For thermal disinfection, the temperature at the allocated sensor has to be monitored. This protection is ensured when, during the monitoring period, the disinfection temperature is continuously exceeded for the entire disinfection period.

If the thermal disinfection function is activated, the monitoring period starts as soon as the temperature at the allocated sensor falls below the disinfection temperature. When the monitoring period ends, the allocated reference relay activates the afterheating. The disinfection period starts to count as soon as the temperature at the allocated sensor exceeds the disinfection temperature.

If the temperature at the allocated sensor exceeds the disinfection temperature by more than 5 K [10 °Ra], the reference relay switches off until the temperature has fallen below a value of 2 K [4 °Ra], above the disinfection temperature.

Thermal disinfection can only be completed when the disinfection temperature is exceeded for the duration of the disinfection period without interruption.

If the disinfection conditions have been fulfilled by solar loading before the monitoring period ends, thermal disinfection is considered complete and a new monitoring period begins.

Due to the flexible control logic, the exact time of thermal disinfection is not predictable. In order to set a fixed time for the disinfection to be run, the starting delay must be used:

```

Th. Disinfection
☒ Start. time
    Start. time 20:00
▶ Hyst. off      5 K
    
```

If the starting delay option **Starting time** is activated, a starting time for the thermal disinfection with starting delay can be adjusted. The activation of the afterheating is then delayed until that starting time after the monitoring period has ended.

If the monitoring period ends, for example, at 12:00 o'clock, and the starting time has been set to 18:00, the reference relay will be energised with a delay of 6 hours at 18:00 instead of 12:00 o'clock.

If, during the waiting time, the disinfection conditions are fulfilled by solar loading, thermal disinfection is considered complete and a new monitoring period begins.

### Heating / Opt. functions / Add new function.../ Th. disinfection

Adjustment channel	Description	Adjustment range / selection	Factory setting
Demand	Demand relay selection	system dependent	system dependent
Circulation pump	Circulation pump option	Yes, No	No
Relay	Circulation pump relay selection	system dependent	system dependent
Sensor	Disinfection sensor selection	system dependent	system dependent
Monit.	Monitoring period	0 ... 30:1 ... 23 (dd:hh)	01:00 (1 day)
Temperature	Disinfection temperature	45 ... 90 °C [114 ... 194 °F]	60 °C [140 °F]
Duration	Disinfection period	0.5 ... 24.0 h	1 h
Start. time	Starting delay option	Yes, No	No
Start. time	Starting point	00:00 ... 23:30	20:00
Function	Activation / Deactivation	Activated, Deactivated	Deactivated



## en

The **DHW heating** is used to demand an afterheating for heating the DHW store.

If the **Loading pump** option is activated, another adjustment channel appears, in which a relay can be allocated to the loading pump. The allocated relay is switched on and off with the demand relay.

If the **Overrun time** option is activated, another adjustment channel appears, in which the overrun time can be adjusted. If the overrun time option is activated, the loading pump relay remains switched on for the adjusted **Duration** after the demand relay has been switched off.

For the DHW heating, different modes are available:

The allocated demand relay is switched on when the temperature at the allocated **Sensor 1** falls below the adjusted switch-on temperature. If the temperature at the allocated sensor 1 exceeds the adjusted switch-off temperature, the relay is switched off.

If the Boiler mode has been selected, another sensor can be allocated in the channel **Sensor 2**. The switch-on, or the switch-off conditions respectively, then have to be fulfilled at both sensors in order for the relay to be energised.

When the **Timer** option is activated, a timer is indicated in which time frames for the function can be adjusted.

**Note:**

For information on timer adjustment see  
page 11

adjustment channel	Description	Adjustment range / selection	Factory setting
Demand	Demand relay selection	system dependent	system dependent
Loading pump	Loading pump option	Yes, No	No
Relay	Loading pump relay selection	system dependent	system dependent
Overrun time	Overrun option	Yes, No	No
Duration	Overrun time	1 ... 10 min	1 min
Mode	Operating mode	Boiler, Therm.	Therm.
Sensor 1	Sensor 1	system dependent	system dependent
Sensor 2	Sensor 2 (only if Mode = Boiler)	system dependent	system dependent
Ton	Switch-on temperature	0 ... 94 °C [32 ... 202 °F]	40 °C [104 °F]
Toff	Switch-off temperature	1 ... 95 °C [34 ... 204 °F]	45 °C [114 °F]
Timer	Timer option	Yes, No	No
Timer	Timer	-	-
Days of the week	Day selection	All days, Monday ... Sunday, Continue	-
Timer	Time frame adjustment	00:00 ... 23:45	-
Funct.	Activation / Deactivation	Activated, Deactivated	Deactivated

HQM
▶ new HQM...
back

In the **HQM** menu, 2 internal heat quantity measurements can be activated and adjusted.

By selecting the menu item **New HQM**, a new heat quantity measurement can be activated.

HQM
▶ Flow sen. S3
Return sen. S4
<input type="checkbox"/> Flow rate sen.

A menu opens in which all adjustments required for the heat quantity measurement can be made.

If the **Flow rate sensor** option is activated, the impulse input or, if available, a Grundfos Direct Sensor™ can be selected. Grundfos Direct Sensors™ are only available if they have been previously registered in the In-/Outputs menu. The impulse rate must be adjusted in that menu as well.

If the **Flow rate sensor** option is deactivated, the controller calculates the heat quantity by means of a fixed flow rate value. This is called heat quantity balancing. For this purpose, the flow rate must be read from the flowmeter at 100 % pump speed and adjusted in the adjustment channel **Flow rate**. In addition to that, a **Relay** must be allocated. Heat quantity balancing is in effect whenever the allocated relay is active.

In the adjustment channel **Fluid type**, the heat transfer fluid must be selected. If either Propylene glycol or Ethylene glycol is selected, the adjustment channel **Ratio** is indicated in which the antifreeze ratio of the heat transfer fluid can be adjusted.

When the **Alternative unit** is activated, the controller will convert the heat quantity into the quantity of fossil fuels (coal, oil or gas) saved, or the CO<sub>2</sub> emission saved respectively. The alternative **Unit** can be selected. A conversion **Factor** must be adjusted for the calculation. The conversion factor depends on the arrangement in use and has to be determined individually.

HQM
▶ HQM 1
HQM 2
new HQM...

Heat quantity measurements already activated will appear in the **HQM** menu above the menu item **New HQM** in numerical order.

HQM 1
Funct. Activated
▶ Delete function
back

If an activated heat quantity measurement is selected, the above mentioned menu with all adjustment values will re-open.


To deactivate a heat quantity measurement, select the menu item **Delete function** at the bottom of the menu.

The heat quantity measurement deleted will disappear from the list and become available for selection in the **New HQM** menu again. The numeration of the other activated heat quantity measurements will not change.

## HQM / New HQM

Adjustment channel	Description	Adjustment range / selection	Factory setting
Flow sen.	Flow sensor selection	system dependent	system dependent
Return sen.	Return sensor selection	system dependent	system dependent
Flow rate sen.	Flow rate sensor option	Yes, No	No
Flow rate sen.	Flow rate sensor selection	Imp1, Gd1, Gd2	-
Flow rate	Flow rate (only if Flow rate sen.=No)	1.0 ... 500.0 l/min	3.0 l/min
Relay	Relay selection	system dependent	system dependent
Fluid type	Heat transfer fluid	Tyfocor LS, Propyl., Ethyl., Water	Water
Ratio	Glycol ratio in the heat transfer fluid (only if Fluid type = Propylene glycol or Ethylene glycol)	5 ... 100 %	40 %
Alternative unit	Alternative unit option	Yes, No	No
Unit	Alternative display unit	Coal, Gas, Oil, CO <sub>2</sub>	CO <sub>2</sub>
Factor	Conversion factor	0,0000001 ... 100,0000000	0,5000000
Funct.	Activation / Deactivation	Activated, Deactivated	Deactivated

## 12 Basic settings

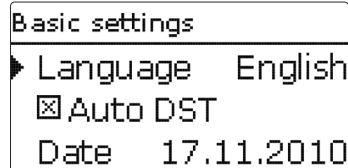


In the **Basic settings** menu, all basic parameters for the controller can be adjusted. Normally, these settings have been made during commissioning. They can be subsequently changed in this menu.

### Basic settings

Adjustment channel	Description	Adjustment range / selection	Factory setting
Language	Selection of the menu language	Deutsch, English, Francais, Italiano, Español	Deutsch
Auto DST	Daylight savings time selection	Yes, No	Yes
Date	Adjustment of the current date	01.01.2001 ... 31.12.2099	01.01.2010
Time	Adjustment of the current time	00:00 ... 23:59	-
Temp. Unit	Temperature unit	°C, °F	°C
Vol. unit	Unit of volume	Gallons, Litre	Litre
Press. unit	Unit of pressure	psi, bar	bar
Energy unit	Energy unit	Wh, BTU	Wh
Factory setting	back to factory settings	Yes, No	No

## 13 SD card

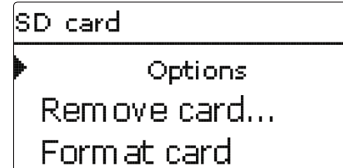

The controller is equipped with an SD card slot for SD memory cards.

The following functions can be carried out with an SD card:

- Logging measurement and balance values. The values can be opened and visualised on a computer, e. g. in a spreadsheet programme.
- Storing adjustments and parameterisations onto the SD card and restoring them if necessary.
- Run firmware updates onto the controller.

### Firmware updates

The current software can be downloaded from [www.resol.de/firmware](http://www.resol.de/firmware).

When an SD card with a firmware update is inserted, the enquiry **Update?** is indicated on the display. The setting can be changed between **Yes** and **No** by pressing buttons **2** and **4**.

➔ To run the update, select **Yes** and confirm by pressing button **5**.

The update is run automatically. The indication **Please wait** and a progress bar appear on the display. When the update has been completed, the controller will automatically reboot and run a short initialisation phase.

➔ To skip the update, select **No**.

The controller commences normal operation.

**Note:**

The controller will only find a firmware update on an SD memory card when it is stored in a folder named "RESOL" on the first level of the SD card.

- Create a folder named "RESOL" on the SD memory card and extract the downloaded ZIP-file into that folder.

**Starting the logging**

- Insert the SD card into the slot
  - Adjust the desired logging type and interval
- Logging will start immediately.

**Stop the logging**

- Select the menu item **Remove card...**
- After **Remove card** is displayed, remove the card from the slot

When **Linear** is adjusted in the adjustment channel **Logging type**, data logging will stop if the capacity limit is reached. The message **Card full** will be displayed.

If **Cyclic** is adjusted, the oldest data logged onto the SD card will be overwritten as soon as the capacity limit is reached.

**Note:**

Because of the increasing size of the data packets, the remaining logging time does not decrease linearly. The data packet size can increase, e. g. with the increasing operating hours value.

**Storing controller adjustments**

- To store the controller adjustments on an SD card, select the menu item **Save adjustments**.

While the adjustments are being stored, first **Please wait**, then **Done!** will be indicated on the display. The controller adjustments are stored as a .SET file on the SD card.

**Loading controller adjustments**

- To load controller adjustments from an SD card, select the menu item **Load adjustments**.

The File selection window is indicated.

- Select the desired .SET file.

While the adjustments are being loaded, first **Please wait**, then **Done!** will be indicated on the display.

**Formatting the SD card**

- Select the menu item **Format card**

The content of the card will be deleted and the card will be formatted with the FAT file system.

**SD card**

Adjustment channel	Description	Adjustment range / selection	Factory setting
Remove card...	Safely remove card	-	-
Save adjustments	Save adjustments	-	-
Load adjustments	Load adjustments	-	-
Logging interval	Logging interval	00:01 ... 20:00 (mm:ss)	01:00
Logging type	Logging type	Cyclic, Linear	Linear
Format card	Format card	-	-

**Note:**

To safely remove the SD card, always select the menu item **Remove card...** before removing the card.

Manual mode		
Controller		
►	Relay 1	Auto
	Relay 2	Auto

In the **Manual mode** menu, the operating mode of all relays in the controller and in connected modules can be adjusted.

All relays are displayed in numerical order; first those of the controller; then those of the individual modules connected. Modules are listed in numerical order.

Under the menu item **All relays...**, all relays can be switched off (Off) or set to automatic mode (Auto) at once.

Off = Relay is switched off (manual mode)

Auto = Relay is in automatic mode

Relay 1	
○	Max
► ●	Auto
○	Min

The operating mode can be selected for each individual relay, too. The following options are available:

Off = Relay is switched off (manual mode)

Min. = Relay active with minimum speed (manual mode)

Max. = Relay active at 100 % speed (manual mode)

Auto = Relay is in automatic mode




**Note:**

Always adjust the operating mode back to **Auto** when the control and service work is completed. Otherwise normal operation will not be possible.

**Manual mode**

Adjustment channel	Description	Adjustment range / selection	Factory setting
Relays R1 ... X	Operating mode selection	Max, Auto, Min, Off	Auto
All relays...	Operating mode selection for all relays	Auto, Off	Off

## 15 User code

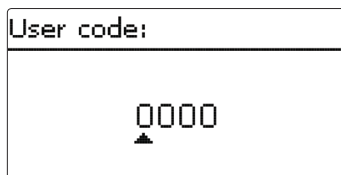

In the **User code** menu, a user code can be entered. Each number of the 4-digit code must be individually adjusted and confirmed. After the last digit has been confirmed, the menu automatically jumps to the superior menu level.


To access the menu areas of the expert level, the expert user code must be entered:

Expert user code: 0262

For safety reasons, the user code should generally be set to the customer code before the controller is handed to the customer!


Customer user code: 0000

## 16 In- / Outputs

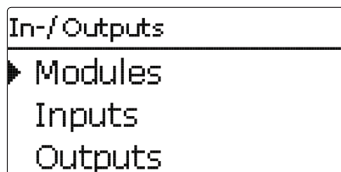

In the **In- / Outputs** menu, external modules can be registered, sensor offsets can be adjusted and relay outputs can be configured.

### 16.1 Modules

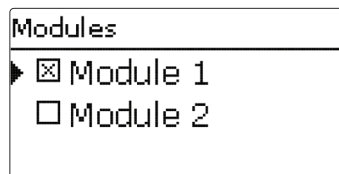

In this menu, up to 2 external modules can be registered.

All modules connected and acknowledged by the controller are available.

➔ To register a module, select the corresponding menu item by pressing button **5**

The checkbox indicates the selection. If a module is registered, all its sensor inputs and relay outputs will be available in the corresponding controller menus.

#### In- / Outputs / Modules

Adjustment channel	Description	Adjustment range / selection	Factory setting
Module 1 ... 2	Registering external modules	-	-

## 16.2 Inputs

S1

Type

Pt1000

Offset

0.0 K

back

In this submenu, the type of the sensor connected can be adjusted for each individual input. The following types can be selected:

- Switch
- KTY
- Pt500
- RTA11-M
- Pt1000
- None

### ATTENTION! System damage!



Selecting the wrong sensor type will lead to unwanted controller actions. In the worst case, system damage can occur!

→ **Make sure that the right sensor type is selected!**

If KTY, Pt500 or Pt1000 are selected, the channel Offset appears, in which an individual offset can be adjusted for each sensor.

→ In order to select a sensor for the offset adjustment, select the corresponding menu item by pressing button **5**

Offset

0.0 K

-15.0    ▲ = 0.0    15.0

→ To adjust the sensor offset, select the desired value by pressing buttons **2** or **4**, then confirm by pressing button **5**

## In- / Outputs / Inputs

Adjustment channel	Description	Adjustment range / selection	Factory setting
S1 ... S12	Sensor input selection	-	-
Type	Selecting the sensor type	Switch, KTY, Pt500, RTA11-M, Pt1000, None	Pt1000
Offset	Sensor offset	-15.0 ... +15.0 K [-30.0 ... +30.0 °Ra]	0.0 K
Imp. 1	Impulse input submenu	-	-
Type	Selecting the sensor type	Impulse, Switch, KTY, Pt500, RTA11-M, Pt1000, None	Impulse
Vol./Imp.	Impulse rate	0.1 ... 100.0	1.0
CS10	CS10 input	-	-
Type	CS type	A ... K	E
Offset	Delete offset	Yes, No	No
Gd1, 2	Digital Grundfos Direct Sensor™	-	-
Type	Grundfos Direct Sensor™ type	RPD, VFD, None	None
	if Type = VFD: Measuring range selection	10 - 200 l/min, 5 - 100 l/min, 2 - 40 l/min, 2 - 40 l/min (fast), 1 - 20 l/min, 1 - 12 l/min*	1 - 12 l/min

\* For the Inputs Gd1 and Gd2, the following sensor combinations are possible:

- 1 x RPD, 1 x VFD
- 2 x VFD, but with different measuring ranges only

### CS sensor offset

If a CS10 irradiation sensor is to be connected, an offset has to be carried out before the connection is made.

To carry out the offset, proceed as follows:


- Adjust the CS type in the Type channel
- Select the Offset channel
- Confirm the reset enquiry with Yes
- Select back to return to the Inputs menu, then connect the CS sensor



### Note:


When Grundfos Direct Sensors™ are used, the sensor ground common terminal block must be connected to PE (see controller manual).



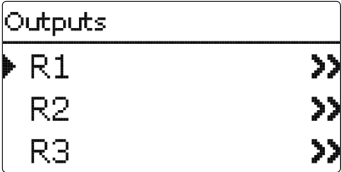

In this menu, the signal type and the minimum speed can be adjusted for each individual relay of the controller and the external modules.

➔ In order to make adjustments for a relay, select the corresponding menu item by pressing button (5).

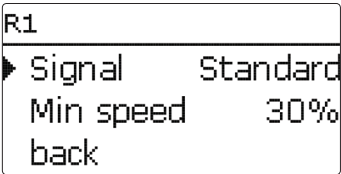

For each relay, the signal type and the minimum pump speed can be adjusted.

The signal type determines the way speed control of a connected pump is effected. The following modes are available:

- Adapter = speed control signal via a VBus®/PWM interface adapter
- 0-10 V = speed control via a 0-10 V signal
- PWM = speed control via a PWM signal
- Standard = pulse packet speed control (factory setting)


With the signal types Adapter, 0-10 V and PWM, the relay itself is not involved in speed control. A separate connection for the corresponding signal will have to be made (see figure).

If **PWM** is selected, the channels **Output** and **Profile** appear. In the Output channel, one of the 2 PWM outputs can be selected. In the Profile channel, a PWM characteristic curve corresponding with the pump in use can be selected (see page 74).

In order to reduce the number of switching processes for high-efficiency pumps, the controller is equipped with a relay overrun function that automatically comes into effect when the speed control signal is not issued by the relay itself. The corresponding relay will then remain switched on for an hour after the switch-off conditions are fulfilled.

In - / Outputs / Outputs


Adjustment channel	Description	Adjustment range / selection	Factory setting
R1 ... R5	Relay output selection	-	-
Signal	Signal type	Adapter, 0-10 V, PWM, Standard	Standard
Output	PWM output selection	7, 8	-
Profile	PWM characteristic curve	A,B,C,D,E,F	A
Min speed	Minimum speed	(20) 30 ... 100 %	30 %

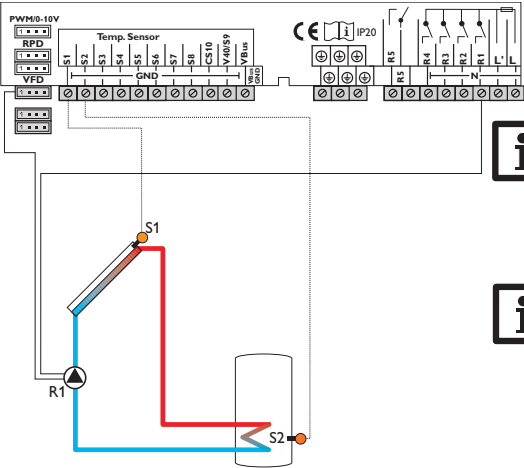


Example of the electrical connection of a high-efficiency pump

16.4 PWM profiles

PWMA (e. g. manufacturer WILO)

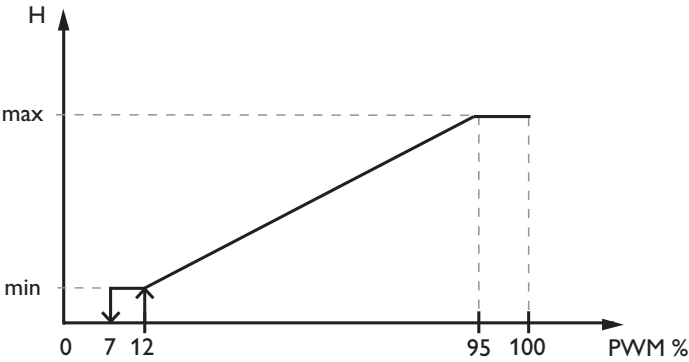


PWM C (e. g. manufacturer Laing)

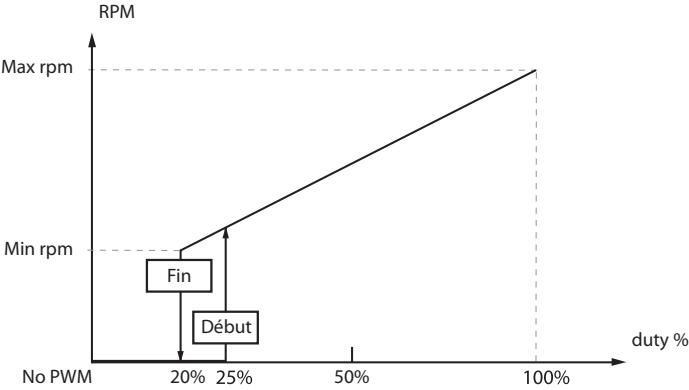


PWM B (e. g. manufacturer Grundfos)


Solar PM Profile

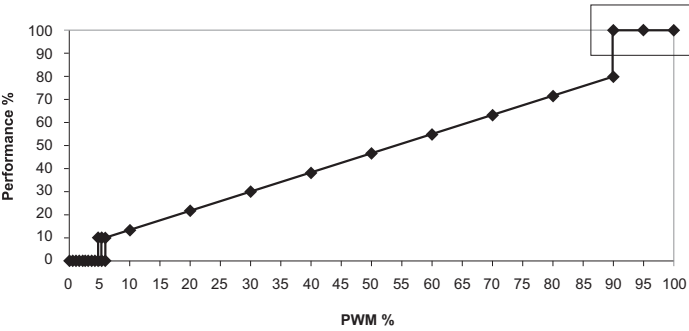


PWM D (e. g. manufacturer WILO)

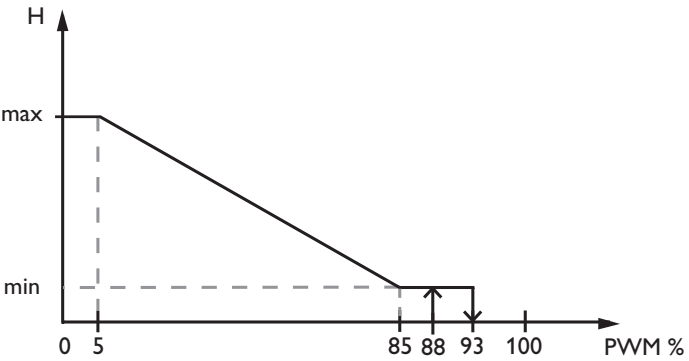

## PWM E (e.g. manufacturer Grundfos)

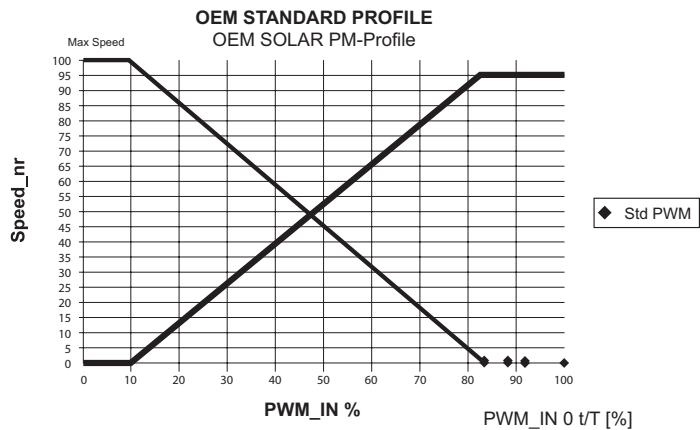

## PWM F (e.g. manufacturer Laing)

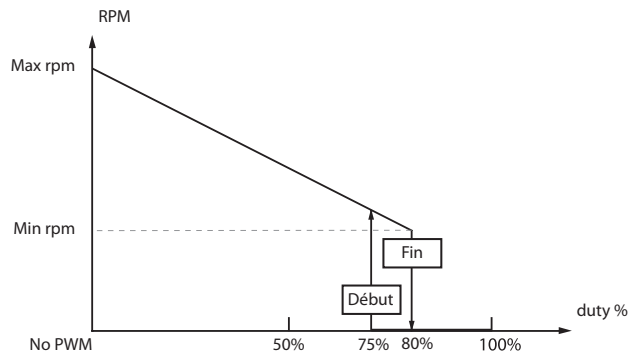

## 17 Troubleshooting

If a malfunction occurs, a message will appear on the display of the controller.



Directional pad flashes red.

Sensor fault. The error code **!Sensor fault** is displayed instead of a temperature on the sensor display channel.

Short circuit or line break  
Disconnected temperature sensors can be checked with an ohmmeter. Please check the resistance values corresponding with the table.

°C	°F	Ω Pt500	Ω Pt1000	Ω KTY	°C	°F	Ω Pt500	Ω Pt1000	Ω KTY
-10	14	481	961	1499	55	131	607	1213	2502
-5	23	490	980	1565	60	140	616	1232	2592
0	32	500	1000	1633	65	149	626	1252	2684
5	41	510	1019	1702	70	158	636	1271	2778
10	50	520	1039	1774	75	167	645	1290	2874
15	59	529	1058	1847	80	176	655	1309	2971
20	68	539	1078	1922	85	185	664	1328	3071
25	77	549	1097	2000	90	194	634	1347	3172
30	86	559	1117	2079	95	203	683	1366	3275
35	95	568	1136	2159	100	212	693	1385	3380
40	104	578	1155	2242	105	221	702	1404	3484
45	113	588	1175	2327	110	230	712	1423	3590
50	122	597	1194	2413	115	239	721	1442	3695

### WARNING! Electric shock!




Upon opening the housing, live parts are exposed.


→ **Always disconnect the controller from power supply before opening the housing!**

The controller is protected by a fuse. The fuse holder (which also holds the spare fuse) becomes accessible when the cover is removed. To replace the fuse, pull the fuse holder from the base.


The display is permanently off.

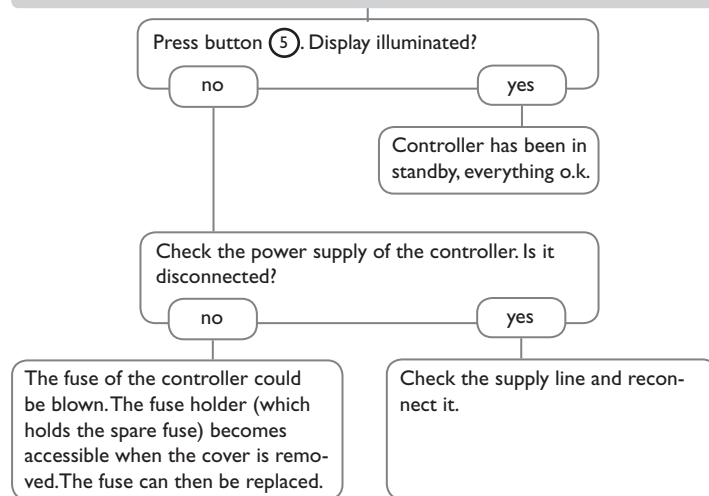


Pump is overheated, but no heat transfer from the collector to the store, flow and return have the same temperature; perhaps also bubbling in the lines.

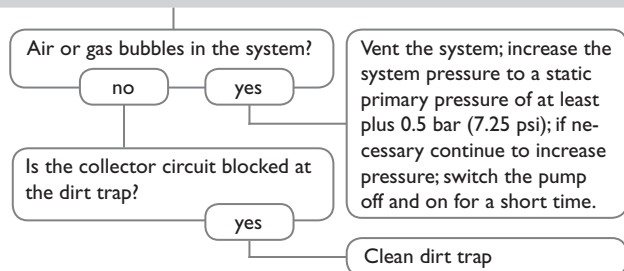


Pump starts for a short moment, switches off, switches on again, etc.

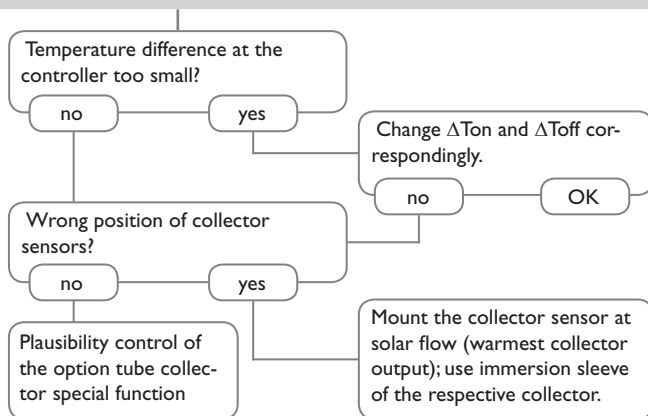


Pump starts up very late.

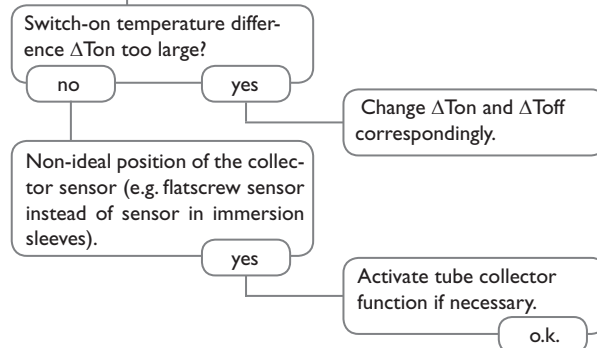


The temperature difference between store and collector increases enormously during operation; the collector circuit cannot dissipate the heat.

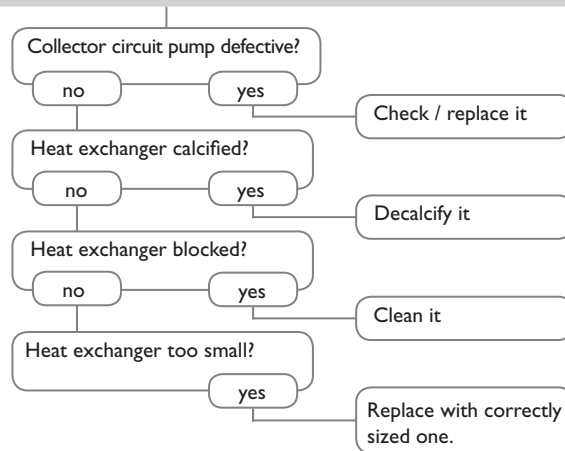


The solar circuit pump does not work, although the collector is considerably warmer than the store.

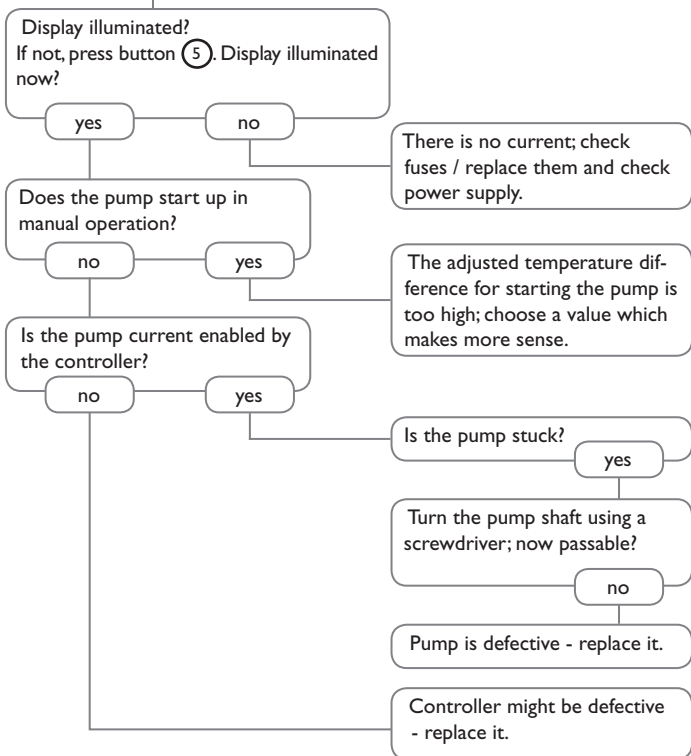

Stores cool down at night.

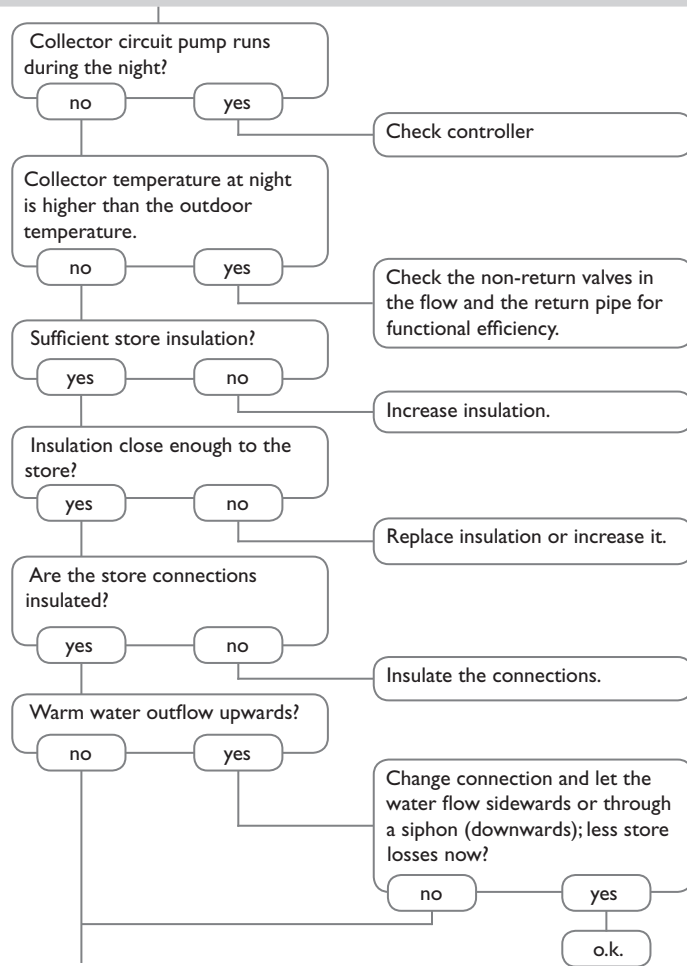

a

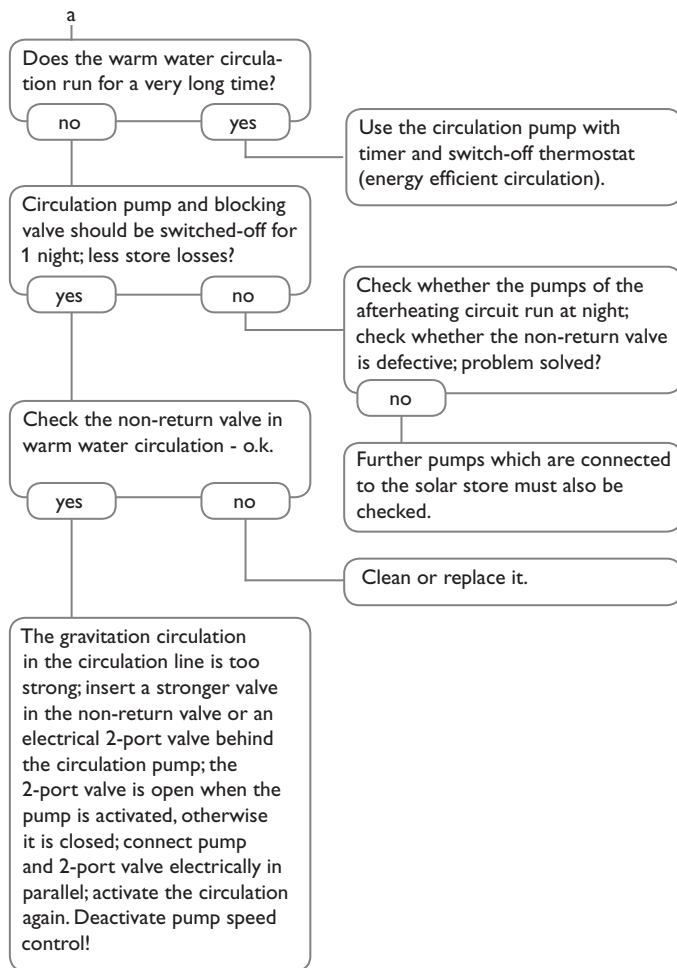

## 18 Accessories

### 18.1 Sensors and measuring instruments



#### Temperature sensors

The product range includes high-precision platinum temperature sensors, flatscrew sensors, outdoor temperature sensors, indoor temperature sensors, cylindrical clip-on sensors, also as complete sensors with immersion sleeve.



#### Overvoltage protection device

In order to avoid overvoltage damage at collector sensors (e.g. caused by local lightning storms), we recommend the overvoltage protection RESOL SP10.

**RESOL SP10**

Article no.: **180 110 70**



#### Grundfos Direct Sensor™ RPD and VFD

The RPD Grundfos Direct Sensor™ is a sensor for measuring the temperature and the pressure.

The VFD Grundfos Direct Sensor™ is a sensor for measuring the temperature and the flow rate.

**RPD 0-10 bar**

Article no.: **130 000 90**

**VFD 1-12 digital**

Article no.: **130 000 80**

**VFD 2-40 digital**

Article no.: **130 001 00**



#### V40 flowmeter

The RESOL V40 is a measuring instrument for detecting the flow of water or water/glycol mixtures. After a specific volume has passed, the V40 reed switch sends an impulse to the calorimeter. The heat quantity used is calculated by the calorimeter using these impulses and the measured temperature difference with the help of pre-defined parameters (glycol type, concentration, heat capacity, etc.).

**RESOL V40**

Article no.: **280 011 00**

### 18.2 VBus® accessories



#### Smart Display SD3 / Large Display GA3

The RESOL Smart Display is designed for simple connection to RESOL controllers with RESOL VBus®. It is used for visualising data issued by the controller: collector temperature, store temperature and energy yield of the solar thermal system. The use of high-efficiency LEDs and filter glass assures a high optical brilliance and good readability. An additional power supply is not required. One module is required per controller.

The RESOL GA3 is a completely mounted large display module for visualisation of collector- and store temperatures as well as the heat quantity yield of the solar system via one 6-digit and two 4-digit 7-segment-displays. An easy connection to all controllers with RESOL VBus® is possible. The front plate is made of antireflective filterglass and is printed with a light-resistant UV-lacquering. The universal RESOL VBus® allows the parallel connection of 8 large displays as well as additional VBus® modules.

**RESOL SD3**

Article no.: **180 004 90**

**RESOL GA3**

Article no.: **180 006 50**





### AM1 Alarm module

The AM1 Alarm module is designed to signal system failures. It is to be connected to the VBus® of the controller and issues an optical signal via the red LED if a failure has occurred. The AM1 also has a potential-free relay output, which can e. g. be connected to a building management system (BMS). Thus, a collective error message can be issued in the case of a system failure. Depending on the controller and the sensors connected, different fault conditions can be signalled, e. g. sensor failures, excess or negative system pressure as well as errors in the flow rate, such as a dry run of the pump.

The AM1 Alarm module ensures that occurring failures can be immediately recognised and repaired, even if the system and the controller are difficult to access or located in a remote place. Thus, the reliability and the stable yield of the system are ensured.

### RESOL AM1

Article no.: **180 008 70**



### DL2 Datalogger

This additional module enables the acquisition and storage of large amounts of data (such as measuring and balance values of the solar system) over a long period of time. The DL2 can be configured and read-out with a standard internet browser via its integrated web interface. For transmission of the data stored in the internal memory of the DL2 to a PC, an SD card can be used. The DL2 is appropriate for all controllers with RESOL VBus®. It can be connected directly to a PC or router for remote access and thus enables comfortable system monitoring for yield monitoring or for diagnostics of faults.

### RESOL DL2

Article no.: **180 007 10**



### EM Extension Module

The EM Extension Module provides 5 additional relays and 6 additional sensor inputs for the DeltaSol® BX Plus controller.

### RESOL EM

Article no.: **145 440 80**



### DL3 Datalogger

Be it solar thermal, heating or DHW heat exchange controllers – with the DL3, you can easily and conveniently log system data of up to 6 controllers. Get a comprehensive overview of all controllers connected with the large full graphic display. Transfer data with an SD memory card or use the LAN interface to view and process data on your PC.

### RESOL DL3

Article no.: **180 009 90**



### **RESOL VBus® / USB & VBus® / LAN interface adapters**

The new VBus® / USB interface adapter is the interface between the controller and a personal computer. With its standard mini-USB port it enables a fast transmission of system data for processing, visualising and archiving via the VBus®. A full version of the RESOL ServiceCenter software is included.

The VBus® / LAN interface adapter is designed for the direct connection of the controller to a PC or router. It enables easy access to the controller via the local network of the owner. Thus, controller access and data charting can be effected from every workstation of the network. The VBus® / LAN interface adapter is suitable for all controllers equipped with a RESOL VBus®. A full version of the RESOL ServiceCenter software is included.

**RESOL VBus® / USB**      Article no.: **180 008 50**

**RESOL VBus® / LAN**      Article no.: **180 008 80**

## A

Afterheating suppression..... 38

Antifreeze, solar optional function..... 37

## B

Balance values..... 29

Bypass, solar optional function..... 34

## C

Chimney sweeper function..... 62

Circulation..... 53

Collector cooling, cooling mode..... 39

Collector emergency temperature..... 30

Commissioning menu..... 14

Controller adjustment, loading of..... 69

Controller adjustments, storing of..... 69

Cooling mode..... 39

CS-Bypass..... 35

## D

Data logging..... 69

Day/Night operation, heating circuit..... 59

DHW heating..... 65

Drainback option..... 41

## E

External heat exchanger, solar optional function... 40

## F

Flow rate monitoring..... 44

Formatting the SD card..... 69

Function block..... 56

Fuse, replacing of..... 76

## H

Heat dump..... 43

Heat exchange..... 51

Heating demands..... 59

Heating period thermal disinfection..... 64

Heat quantity measurement..... 66

## I

Irradiation switch..... 58

## M

Mains connection..... 7

Manual mode..... 70

Meas. values..... 29

Message relay..... 50

Minimum collector limitation..... 30

Mixer, optional arrangement function..... 49

Modules, registration of..... 71

## O

Offset..... 72

Operating hours counter..... 29

Operating mode, relays..... 70

## P

Parallel relay, optional arrangement function..... 49

Parallel relay, solar optional function..... 38

Pressure monitoring..... 45

Priority logic..... 31

Progression chart..... 29

PWM pump speed control..... 73

## R

Registering external modules..... 71

Return preheating..... 55

Room thermostat..... 60

## S

Sensor offset..... 72

Solar external heat exchanger..... 40

Solid fuel boiler..... 52

Store cooling, cooling mode..... 39

Store loading..... 50

Store sequence control..... 32

Store set temperature..... 31

System cooling, cooling mode..... 39

## T

Target temperature, solar optional function..... 37

Technical data..... 4

Thermostat function..... 56

Timer..... 11

Tube collector function..... 36

Twin pump..... 42

## U

User code..... 71

Distributed by:

**RESOL – Elektronische Regelungen GmbH**

Heiskampstraße 10

45527 Hattingen / Germany

Tel.: +49 (0) 23 24 / 96 48 - 0

Fax: +49 (0) 23 24 / 96 48 - 755

[www.resol.com](http://www.resol.com)

[info@resol.com](mailto:info@resol.com)

**Important note**

The texts and drawings of this manual are correct to the best of our knowledge. As faults can never be excluded, please note:

Your own calculations and plans, under consideration of the current standards and directions should only be basis for your projects. We do not offer a guarantee for the completeness of the drawings and texts of this manual - they only represent some examples. They can only be used at your own risk. No liability is assumed for incorrect, incomplete or false information and / or the resulting damages.

**Note**

The design and the specifications can be changed without notice.

The illustrations may differ from the original product.

**Imprint**

This mounting- and operation manual including all parts is copyrighted. Another use outside the copyright requires the approval of **RESOL – Elektronische Regelungen GmbH**. This especially applies for copies, translations, micro films and the storage into electronic systems.

**Editor: RESOL – Elektronische Regelungen GmbH**